_		1				2			3			4			ı
		Available	e execu	utions											
7		Execution No.		Materi ID	ial	Cylinder	Alignn	Attribute 1: nment tool type			tion desigr	-			Δ
	004			54 4 5 5 5		No.	SCRE	WS	WEDGES		COMPACT				
	-	001		PAAD32		5			X	X					
	-	002		PAAD16		5	X			X					
	003 004			PAAD32597		5977 6			X	X		_			
			PAAD103372			X			X						
1		005		PAAD37	6986	7			X		X				B
'		000	6	PAAD37	77117	7	X				X				
		007		PAAD326134		7			X	X					
		008	8	PAAD24	2995	7	X			X					
_		009	9	PAAD32	2052	8	X			X					
		010)	PAAD32	6249	8			Χ	X					
	N	IOTE													C
)	E n P T a a o	Detailed guice shown in the shown in the shown in the showing the	dance for the about the time the time he design to owner (epancies called the publis	ive table, the st, WinGD must signed to pro of printing. I of the subje of this publici arising from t her and copy	ns is provien it may sent to the continuous of the continuous of the continuous of the continuous of the feature right owne	ded within the still be under acted directlate and authe publication is is subject of accept ares of any areshall unde	ne Marine I developme y. noritative in deals wit to regular y responsil tual item r no circum	Installa ent or nformat th comp improv bility or in the nstance:	not available. ion with regar ilicated technic vements, modific to liability for a respective pro-	For further inf d to the subje al matters sui cations and ch any eventual e duct being diffi e for any find	fic execution of iormation or in ect-matter cove ted only for spanges. Consequences or omiss erent from the information	case of a ered as it wa pecialists in t ently, the put ions in this d ise shown in	he olisher ocume this or	nt	
Prod.		X62DF-2													L
Change History	A	sna102				Draw			I		1	,			•
Chang		dki021	dst009	06.12.2021			vina Una	tated							
	Re	+	Approver	100.12.2021	<u>ΓΝΔ Δ </u>		ring Upo Design	dated					_		Ε
	1 '''		/ \pp. 0 / 0.	Approval Date	Change ID	1106 new	ving Upo Design Synopsis	dated				Activity Code	- E	- C	E
-	V	VIN	IG	iD	Change ID	1106 New Change	Design Synopsis GINE	A	LIGNME	ENT		Activity Code		- C	E
	V	VI N interthur	IG	iD	Change ID	1106 New	Design Synopsis GINE	A		ENT		Activity Code		- C	Ε
	V W		J G Gas & D	Diesel	Change ID	1106 new change)L EN master	Design Synopsis GINE	A		ENT		Activity Code		C	E
	V W	interthur	J G Gas & D	Diesel	Change ID TOC MIDS Dimension	1106 new change)L EN master	Design Synopsis GINE drawir		LIGNME	ENT		Activity Code	Е		
Sc Copy By ta	Sep cale	interthur arate E _ //interthur Gas &	Gas & D BOM QV Diesel Ltd. All drawing the reseither the whol	Diesel ailable ights reserved. acipient recognizes le nor any part	Change ID TOC MIDS Dimension	on	Design Synopsis GINE drawir	A l	LIGNME			,	194	- c	


Α


В

C

D

Ε

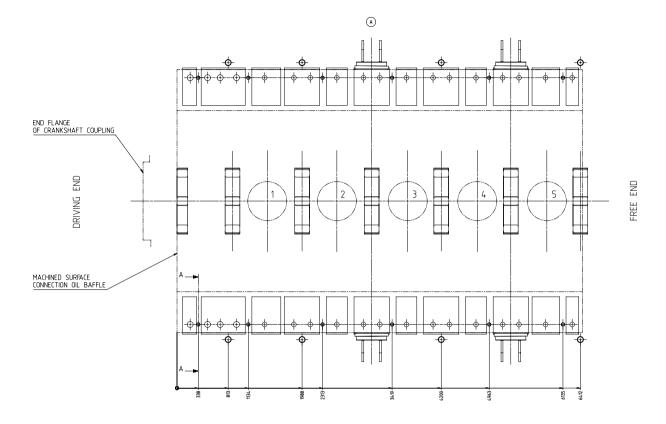

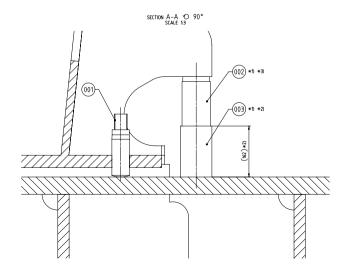

(A) CAUTION


Tool and/or bedplate damage


Countermeasure: Avoid overloading of jacking screws and/or bedplate areas by observing the appropriate engine alignment/assembly procedure as follows:


- Lift the engine into the engine room and place it on levelled, temporary blocks, underneath the bedplate beside the jacking screws.
- Screw in all jacking screws until touching the foundation top plate (the full number of jacking screws must be used).
- Apply hydraulic jacks to the protruding bedplate ribs nearby the jacking screws as indicated in the drawing.
- Remove the temporary blocks by slightly lifting the engine with the hydraulic jacks.
- Start with the engine alignment by means of jacking screws. Before turning a jacking screw, reduce its load by use of the hydraulic jacks. Any height adjustment must be performed in small steps no more than 1 mm per step (equals to 1/2 screw turn, based on 2 mm thread pitch). Changes in height larger than the maximum allowance (1 mm) require a gradual process where all jacking screws are successively adjusted in stages, to ensure the best possible load distribution.

A Remarks

- *1) To be provided by the shipyard.
 *2) Height depending on the requirement (chock thickness in correlation with maximum permissible extension of the hydraulic jack).
- *3) Hydraulic jack proposal Type: Enerpac RCS-1002 Load at 700 bar: 880 kN

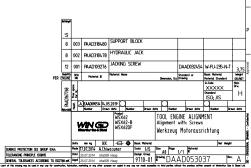

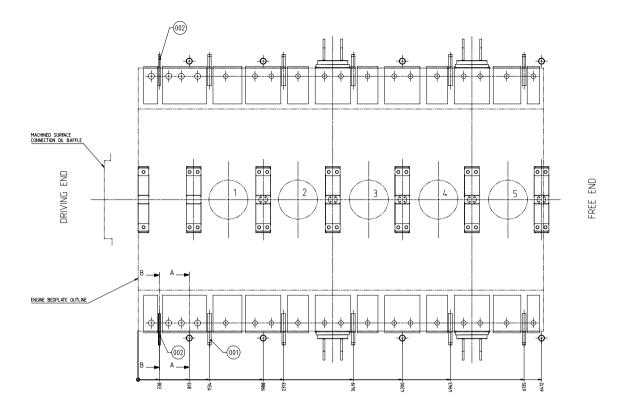

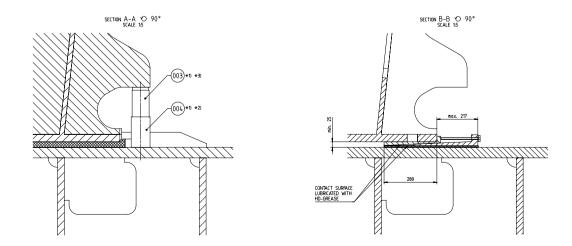



Tool and/or bedplate damage


Countermeasure: Avoid overloading of bedplate areas by observing the appropriate engine alignment/assembly procedure as follows:

- Insert wedges and/or shims in all indicated positions.
- Lift the engine into the engine room and place it on levelled wedges and/or shims (wedges or shims must be inserted as deep as possible below the bedplate to ensure that the support point is as close as possible at the engine monoblock column).
- Apply hydraulic jacks to the protruding bedplate ribs nearby the relevant wedge and/or shim as indicated in the drawing.
- Start with the engine alignment by means of wedges and/or shims. Before adjusting the height of wedges and/or shims lift the engine by the hydraulic jacks. Any height adjustment must be performed in small steps no more than 1 mm per step. Changes in height larger than the maximum allowance (1mm) require a gradual process where all wedges and/or shims are successively adjusted in stages, to ensure the best possible load distribution.

- *1) To be provided by the shipyard.
 *2) Height depending on the requirement (chock thickness in correlation with maximum permissible extension of the hydraulic jack).
 *3) Hydraulic jack proposal
 Type: Enerpac RCS-1002
 Load at 700 bar: 880 kN

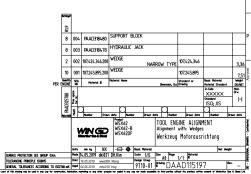

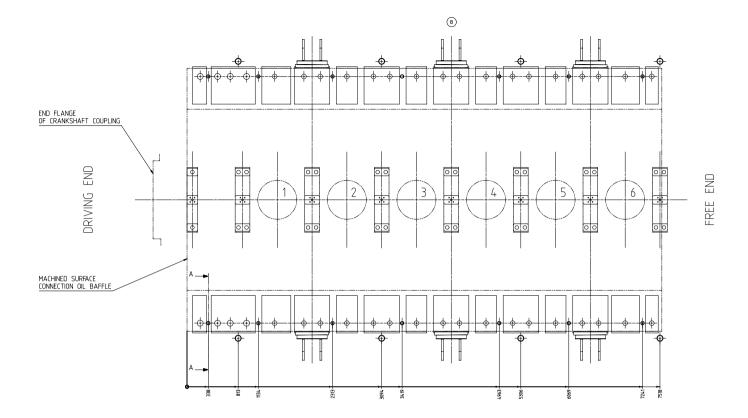

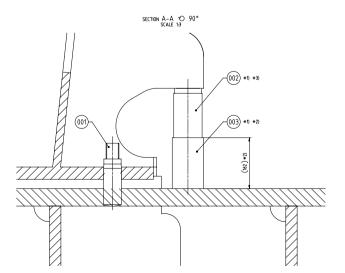

(B) CAUTION

Tool and/or bedplate damage


Avoid overloading of jacking screws and/or bedplate areas by observing the appropriate engine alignment/assembly procedure as follows:


- Lift the engine into the engine room and place it on levelled, temporary blocks, underneath the bedplate beside the jacking screws.
- Screw in all jacking screws until touching the foundation top plate (the full number of jacking screws must be used).
- Apply hydraulic jacks to the protruding bedplate ribs nearby the jacking screws as indicated in the drawing.
- Remove the temporary blocks by slightly lifting the engine with the hydraulic jacks.
- Start with the engine alignment by means of jacking screws. Before turning a jacking screw, reduce its load by use of the hydraulic jacks. Any height adjustment must be performed in small steps no more than 1 mm per step (equals to 1/2 screw turn, based on 2 mm thread pitch). Changes in height larger than the maximum allowance (1 mm) require a gradual process where all jacking screws are successively adjusted in stages, to ensure the best possible load distribution.

B Remarks

- *1) To be provided by the shipyard.
- *1) to be provided by the shippyara.
 *2) Height depending on the requirement (chock thickness in correlation with maximum permissible extension of the hydraulic jack).
 *3) Hydraulic jack proposal Type: Enerpac RCS-1002 Load at 700 bar: 880 kN



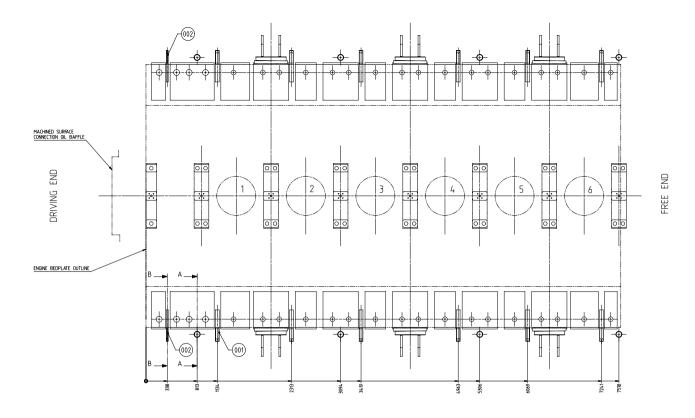

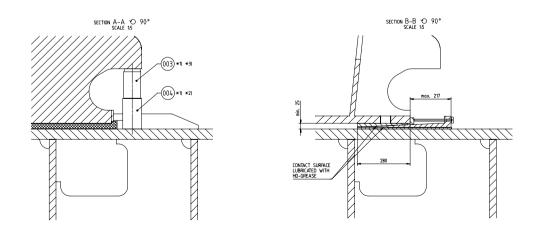


Tool and/or bedplate damage

Countermeasure:


Avoid overloading of bedplate areas by observing the appropriate engine alignment/assembly procedure as follows:

- Insert wedges and/or shims in all indicated positions.
- Lift the engine into the engine room and place it on levelled wedges and/or shims (wedges or shims must be inserted as deep as possible below the bedplate to ensure that the support point is as close as possible at the engine monoblock column).
- Apply hydraulic jacks to the protruding bedplate ribs nearby the relevant wedge and/or shim as indicated in the drawing.
- Start with the engine alignment by means of wedges and/or shims. Before adjusting the height of wedges and/or shims lift the engine by the hydraulic jacks. Any height adjustment must be performed in small steps no more than 1 mm per step. Changes in height larger than the maximum allowance (firm) require a gradual process where all wedges and/or shims are successively adjusted in stages, to ensure the best possible load distribution.


- *1) To be provided by the shipyard. *2) Height depending on the requirement
- (chock thickness in correlation with maximum permissible extension of the hydraulic jack).
- *3) Hydraulic jack proposal Type: Enerpac RCS-1002 Load at 700 bar: 880 kN

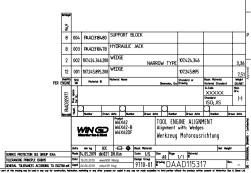



SEQ NO	QTY	/ Item ID		Item Name				Dimension	Standard-ID	Basic Material		V	Net Neight
1	10	107.42	24.346.200	WEDGE			N	NARROW TYPE				(3.357
2	8	107.2	45.895.200	WEDGE								1	7.511
3	10	PAAD	318478	TOOL ENGIN	NE ALIGNMENT								75
4	8	PAAD	318480	TOOL ENGIN	NE ALIGNMENT								75
5	2		318479	SUPPORT P	LATE								
Prod.			7 X62DF 7 X62DF										
	Δ	sna102	7 X62DF	2.1	(N)AA002472	See cor	respondin	o ChangeNotic	7 0				
Change History Prod.	A -	sna102 dki021			CNAA002473	See cor	respondin	g ChangeNotic	ce			-	
	A -		7 X62DF mhu019 mhu019	20.12.2022	CNAA002473 Change ID	See cor		g ChangeNotic	ce	Approved	Activity Code	- - E	
Change History	Rev.	dki021 Creator VIII nterthol Bill onterthur Ga	mhu019 mhu019 Approver Approver Of Materia is & Diesel Ltd.	20.12.2022 15.03.2021 Approval Date Diesel All rights reserved	Change ID TOOL Dimension	- Change Sy	ynopsis	E ALI	GNMEN		Activity Code Net Weight	- E	-
Copyr By etg	Rev.	dki021 Creator Mill Interthur Ga possession nd honours this docum	mhu019 Approver Approver Of Materia as & Diesel Ltc of the docu	20.12.2022 15.03.2021 Approval Date	Change ID TOOL Dimension Units Main Design	Change Sy	rnopsis GIN	E ALIC			-	- E	- C

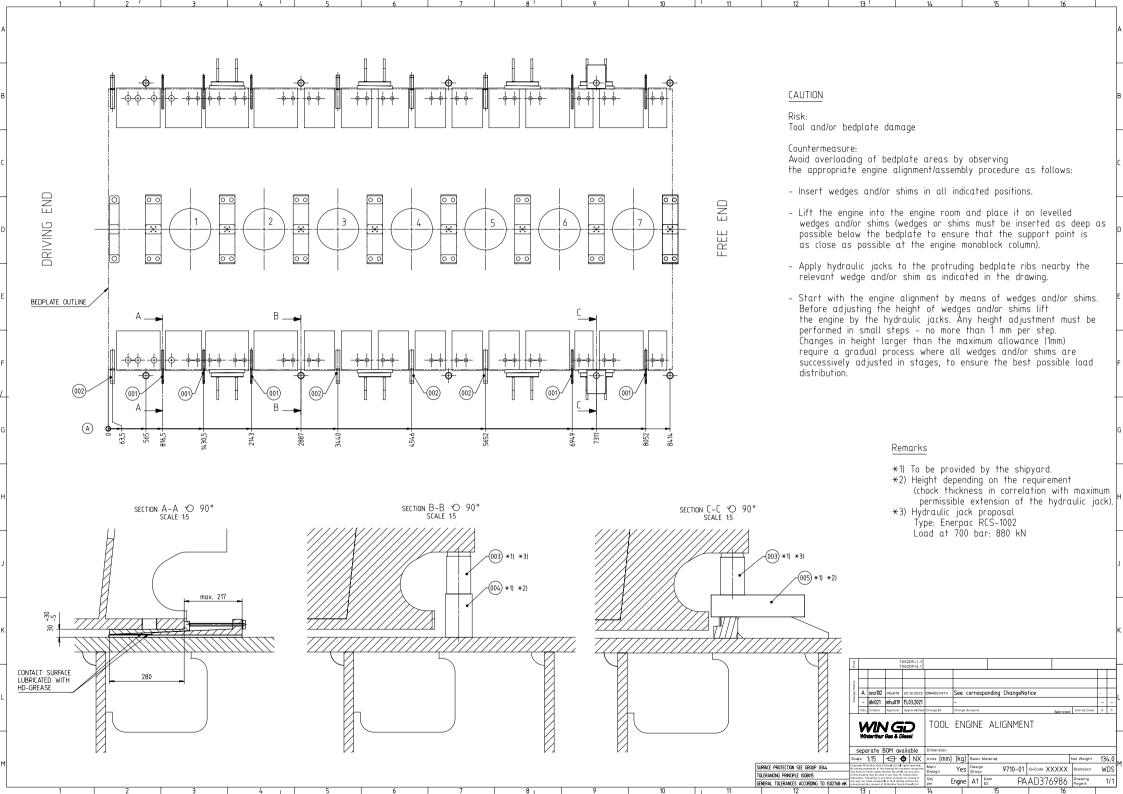

NO	QT'	Y Item	n ID	Item Name				Dimension	Standard-ID	Basic	c Material		١	Net Weight
1	18	PA	AD103276	JACKING SC	REW					W-F	-U-235-N-T			3.75
2	2	PA	AD103306	SPONGE RU	BBER RING								(0.001
3	10	PA	.AD318478	TOOL ENGIN	FOOL ENGINE ALIGNMENT							75		
4	8	PA	AD318480	TOOL ENGIN	TOOL ENGINE ALIGNMENT								75	
5	2		AD318479	SUPPORT PL	.ATE									
Prod.			7 X62D 7 X62D											
Prod.			7 X62D 7 X62D											
			7 X62D	F-2.1										
Change History Prod.	A	sna10	7 X62D	20.12.2022	CNAA002473	See cor	respondi	ing ChangeNot	ice					
	A -	dki02	7 X62D 02 mhu019 21 mhu019	F-2.1	CNAA002473 Change ID	See cor		ing ChangeNot	ice	Appro	oved	Activity Code	· .	-
Change History	Rev.	dki02 Creator Creator Intert Bi interthur	7 X62D 02 mhu019 11 mhu019 1 Approver 11 Gas & dill Of Materia Gas & Diesel Ltd	20.12.2022 15.03.2021 Approval Date Diesel I. All rights reserved.	Change ID TOOL Dimension	- Change Sy	ynopsis	IE ALI	ice		oved	Activity Code Net Weight	-	- C
Change History	Rev.	dki02 Creator Intert Bi interthur possession this doc	7 X62D 02 mhu019 11 mhu019 1 Approver 11 Of Materia 1 Gas & Diesel Ltutor of the document may be upon the province of the control of the document may be upon the province of the document may be up	20.12.2022 15.03.2021 Approval Date	Change ID TOOL Dimension Units Main Design	Change Sy	ynopsis GIN	JE ALI		NT			- E	-

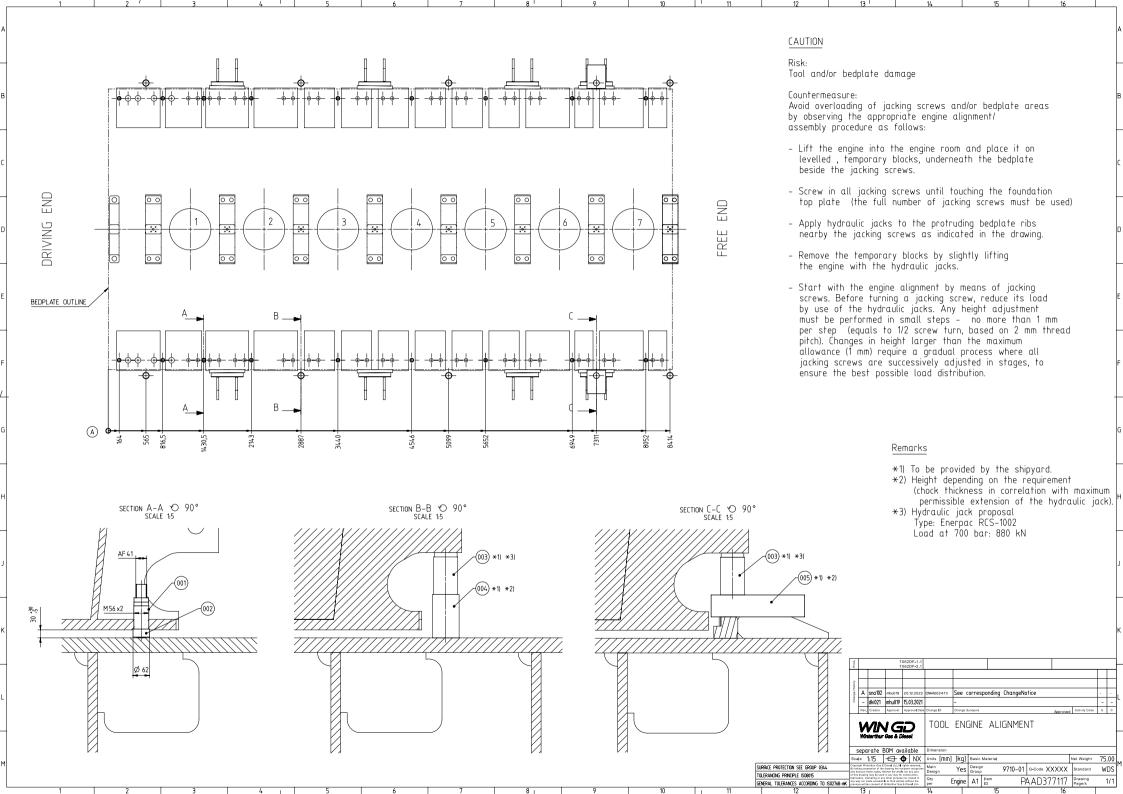

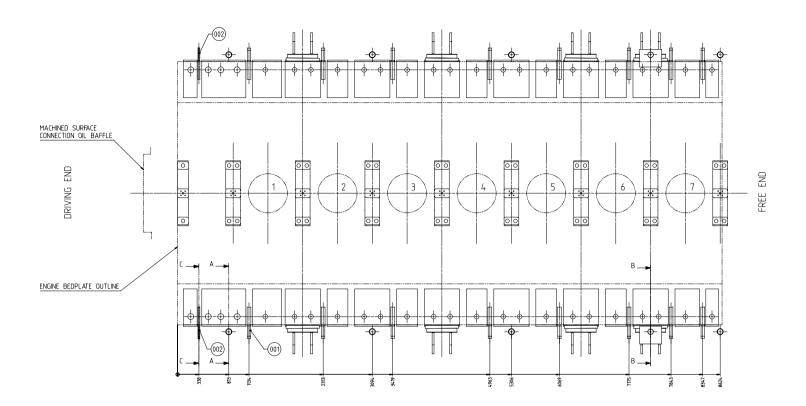

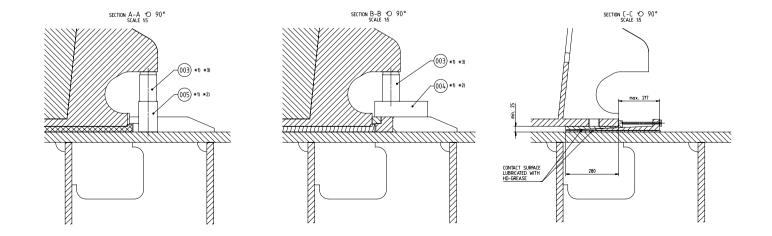


Tool and/or bedplate damage


Countermeasure:


Avoid overloading of bedplate areas by observing the appropriate engine alignment/assembly procedure as follows:

- Insert wedges and/or shims in all indicated positions.
- Lift the engine into the engine room and place it on levelled wedges and/or shims (wedges or shims must be inserted as deep as possible below the bedplafe to ensure that the support point is as close as possible at the engine monoblock column).
- Apply hydraulic jacks to the protruding bedplate ribs nearby the relevant wedge and/or shim as indicated in the drawing.
- Start with the engine alignment by means of wedges and/or shims. Before adjusting the height of wedges and/or shims lift the engine by the hydraulic jacks. Any height adjustment must be performed in small steps no more than 1 mm per step. Changes in height larger than the maximum allowance (1mm) require a gradual process where all wedges and/or shims are successively adjusted in stages, to ensure the best possible load distribution.

- *1) To be provided by the shipyard. *2) Height depending on the requirement (chock thickness in correlation with maximum permissible extension of the hydraulic jack).
- *3) Hydraulic jack proposal Type: Enerpac RCS-1002 Load at 700 bar: 880 kN

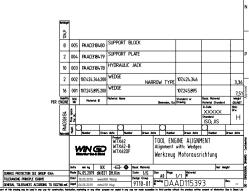

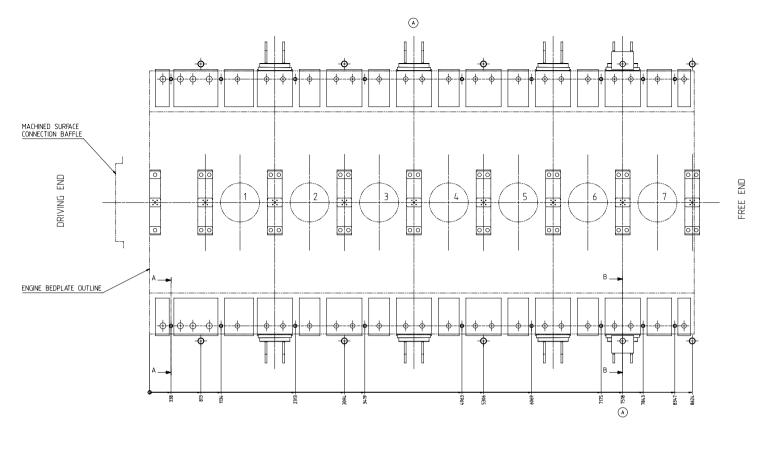

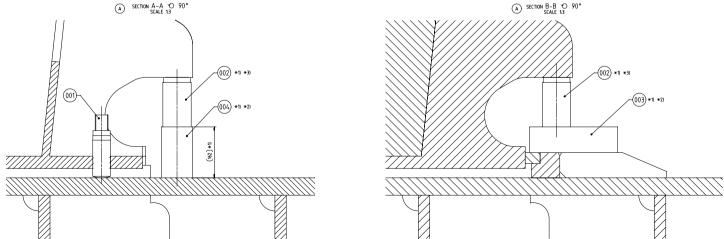

(A) CAUTION


Tool and/or bedplate damage


Countermeasure: Avoid overloading of jacking screws and/or bedplate areas by observing the appropriate engine alignment/assembly procedure as follows:

- Lift the engine into the engine room and place it on levelled, temporary blocks, underneath the bedplate beside the jacking screws.
- Screw in all jacking screws until touching the foundation top plate (the full number of jacking screws must be used).
- Apply hydraulic jacks to the protruding bedplate ribs nearby the jacking screws as indicated in the drawing.
- Remove the temporary blocks by slightly lifting the engine with the hydraulic jacks.
- Start with the engine alignment by means of jacking screws. Before turning a jacking screw, reduce its load by use of the hydraulic jacks. Any height adjustment must be performed in small steps no more than 1 mm per step (equals to 1/2 screw turn, based on 2 mm thread pitch). Changes in height larger than the maximum allowance (1 mm) require a gradual process where all jacking screws are successively adjusted in stages, to ensure the best possible load distribution.

- *1) To be provided by the shipyard.*2) Height depending on the requirement (chock thickness in correlation with maximum permissible extension of the hydraulic jack).
- *3) Hydraulic jack proposal Type: Enerpac RCS-1002 Load at 700 bar: 880 kN



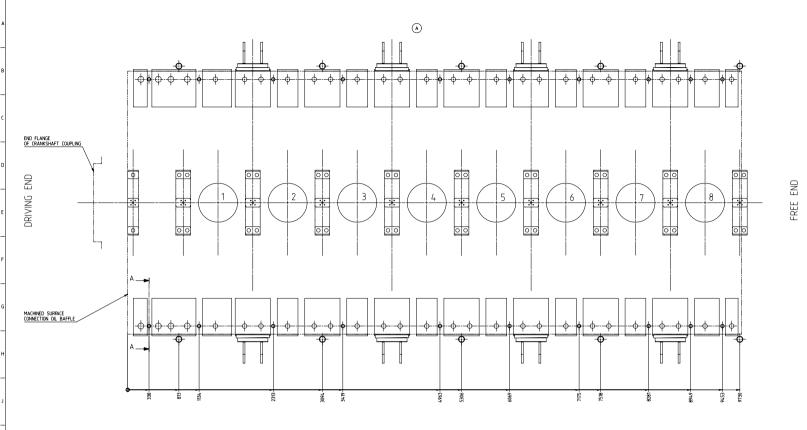

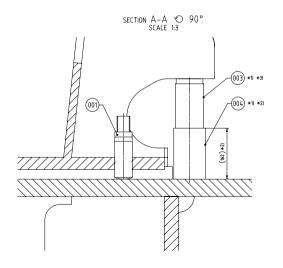

Rist

Tool and/or bedplate damage


Countermeasure:


Avoid overloading of jacking screws and/or bedplate areas by observing the appropriate engine alignment/assembly procedure as follows:


- Lift the engine into the engine room and place it on levelled, temporary blocks, underneath the bedplate beside the jacking screws.
- Screw in all jacking screws until touching the foundation top plate (the full number of jacking screws must be used).
- Apply hydraulic jacks to the protruding bedplate ribs nearby the jacking screws as indicated in the drawing.
- Remove the temporary blocks by slightly lifting the engine with the hydraulic jacks.
- Start with the engine alignment by means of jacking screws. Before turning a jacking screw, reduce its load by use of the hydraulic jacks. Any height adjustment must be performed in small steps - no more than 1 mm per step (equals to 1/2 screw turn, based on 2 mm thread pitch). Changes in height larger than the maximum allowance (1 mm) require a gradual process where all jacking screws are successively adjusted in stages, to ensure the best possible load distribution.

- *1) To be provided by the shipyard.
- *2) Height depending on the requirement
 (chock thickness in correlation with maximum
 permissible extension of the hydraulic inch
- permissible extension of the hydraulic jack). *3) Hydraulic jack proposal Type: Enerpac RCS-1002 Load at 700 bar: 880 kN



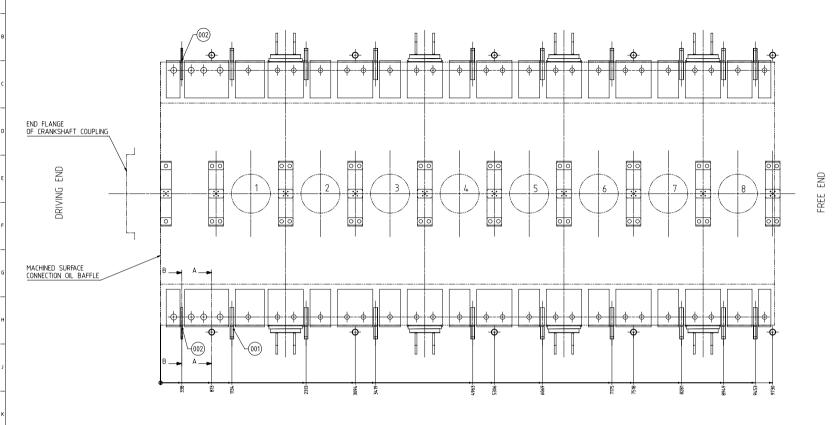

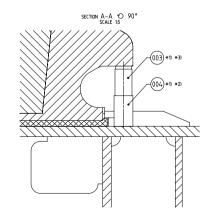

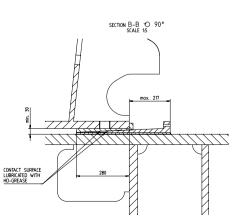



Tool and/or bedplate damage


Avoid overloading of bedplate areas by observing the appropriate engine alignment/assembly procedure as follows:


- Insert wedges and/or shims in all indicated positions.
- Lift the engine into the engine room and place it on levelled wedges and/or shims (wedges or shims must be inserted as deep as possible below the bedplate to ensure that the support point is as close as possible at the engine monoblock column).
- Apply hydraulic jacks to the protruding bedplate ribs nearby the relevant wedge and/or shim as indicated in the drawing.
- Start with the engine alignment by means of wedges and/or shims. Before adjusting the height of wedges and/or shims lift the engine by the hydraulic jacks. Any height adjustment must be performed in small steps no more than 1 mm per step. Changes in height larger than the maximum allowance (1mm) require a gradual process where all wedges and/or shims are successively adjusted in stages, to ensure the best possible load distribution.


- *1) To be provided by the shipyard. *2) Height depending on the requirement (chock thickness in correlation with maximum
- permissible extension of the hydraulic jack).
- *3) Hydraulic jack proposal Type: Enerpac RCS-1002 Load at 700 bar: 880 kN

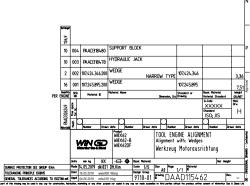


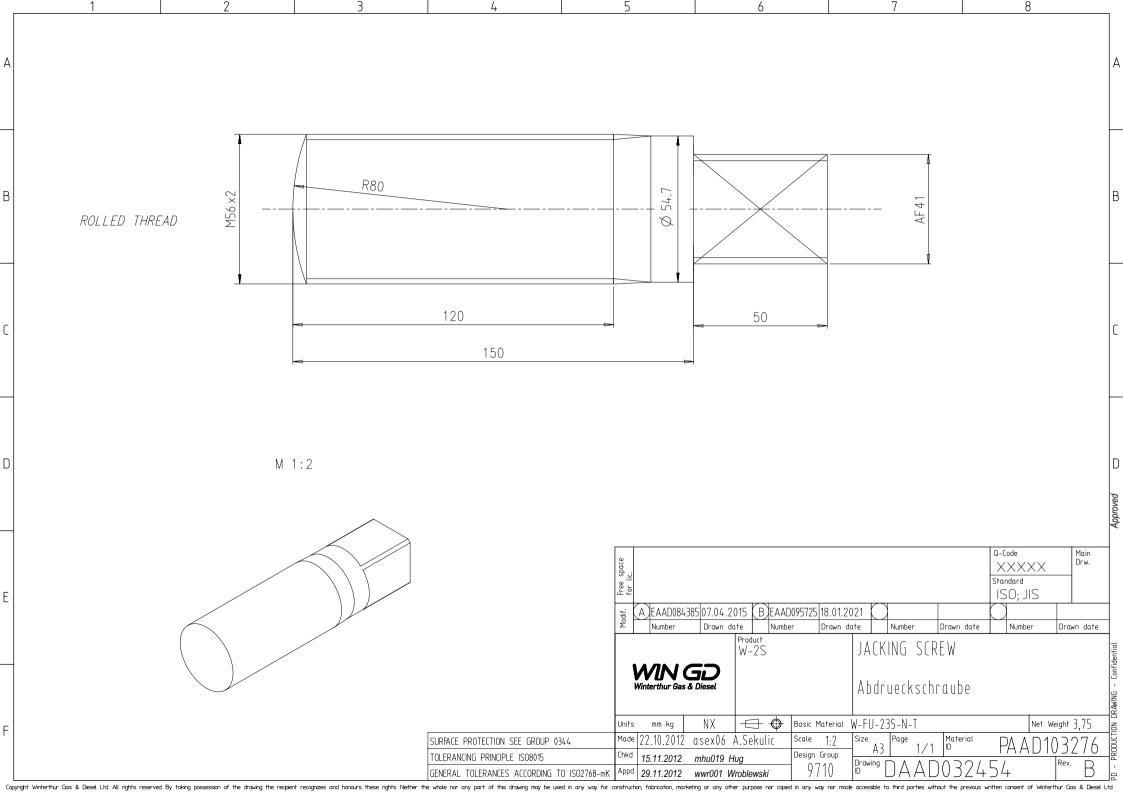


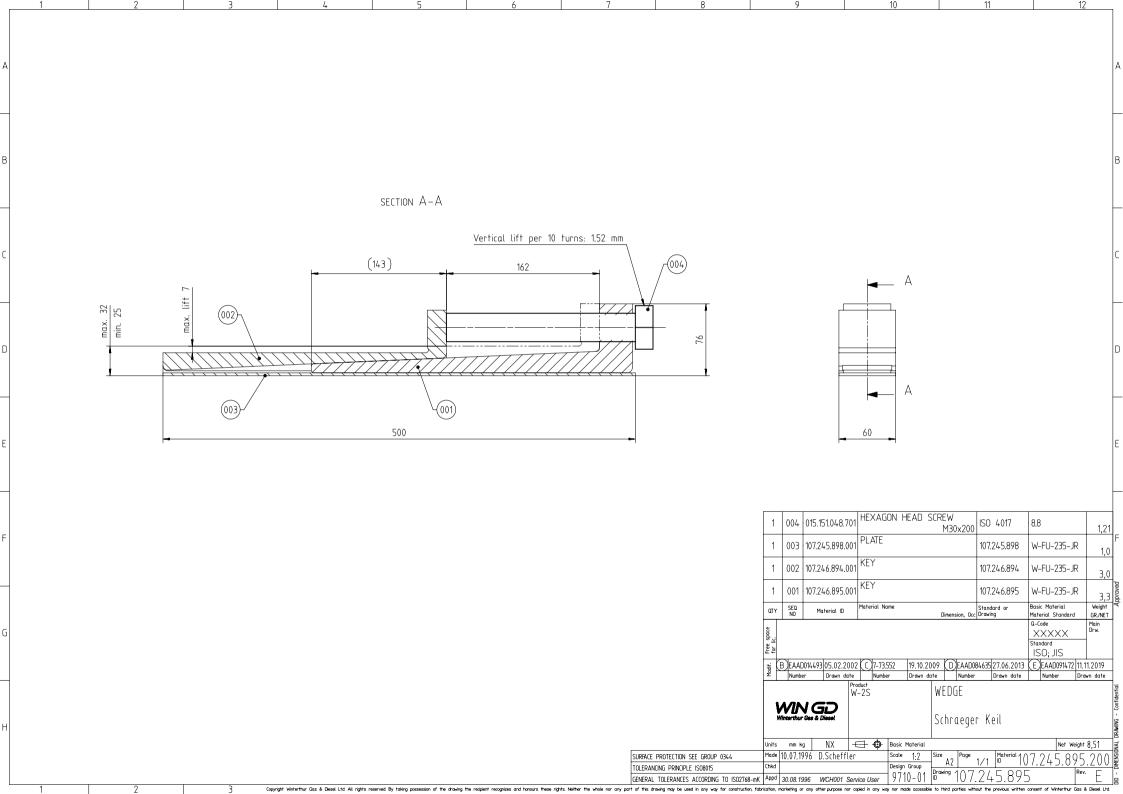


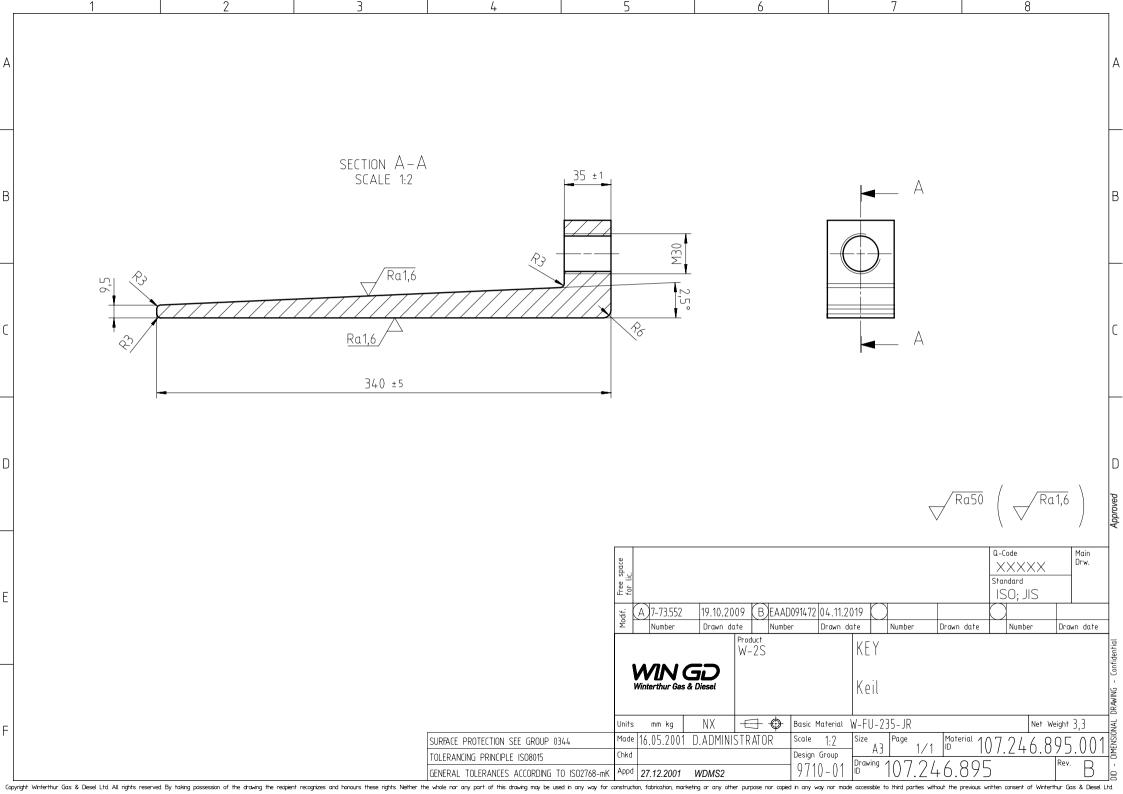


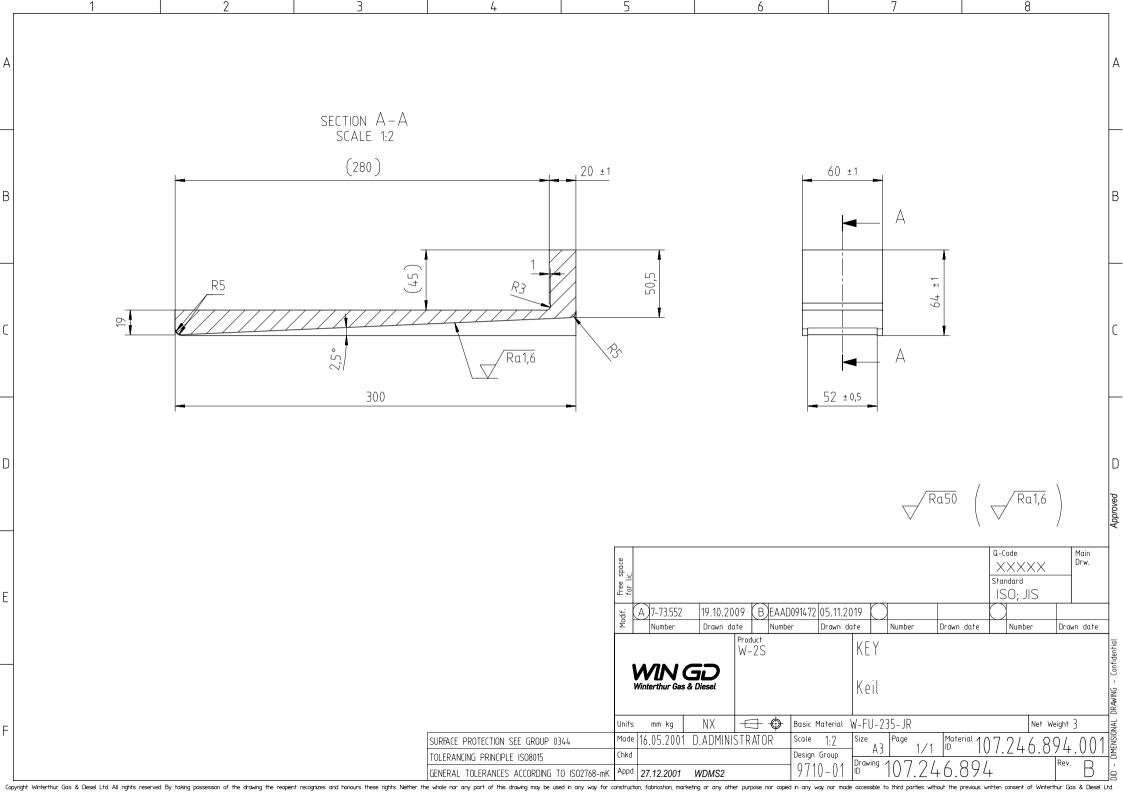


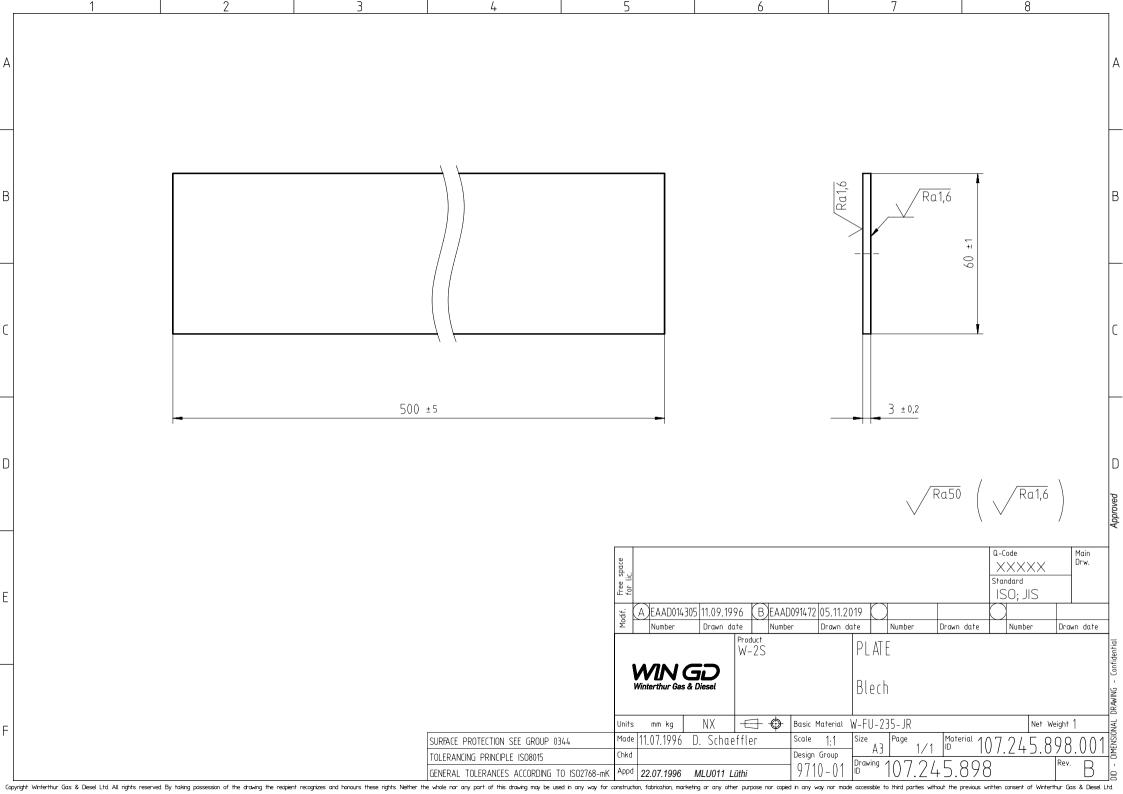

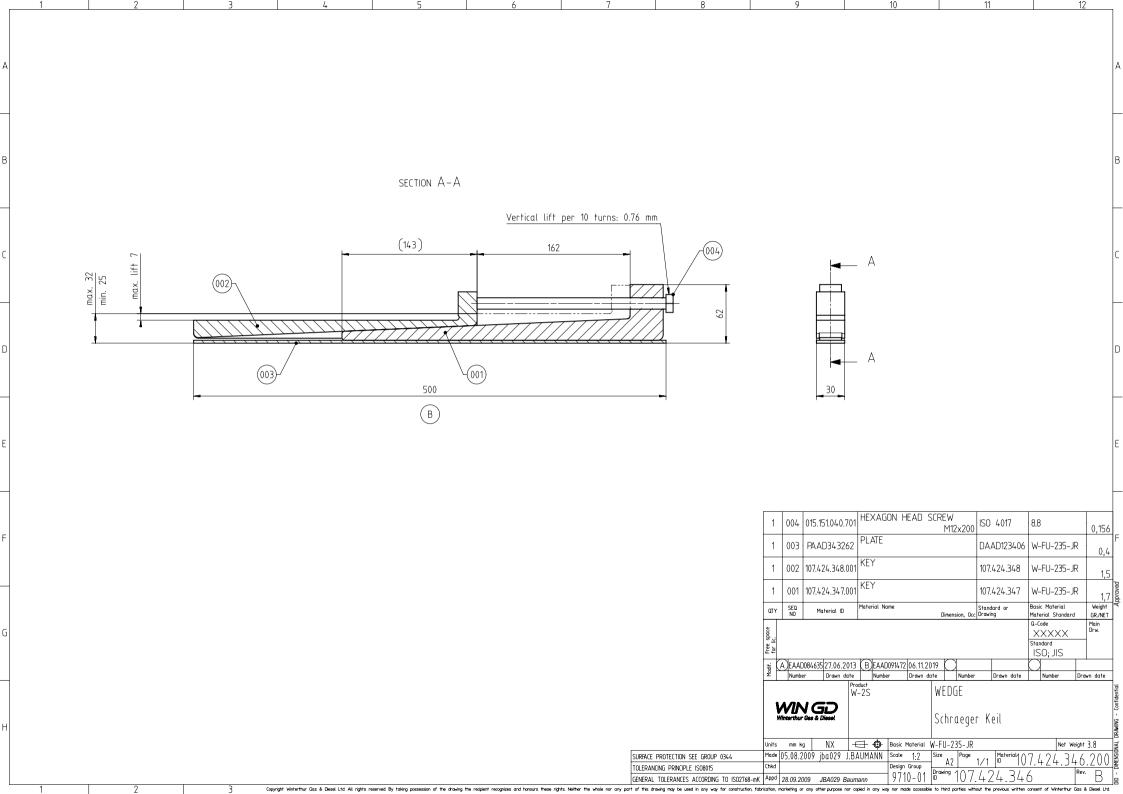

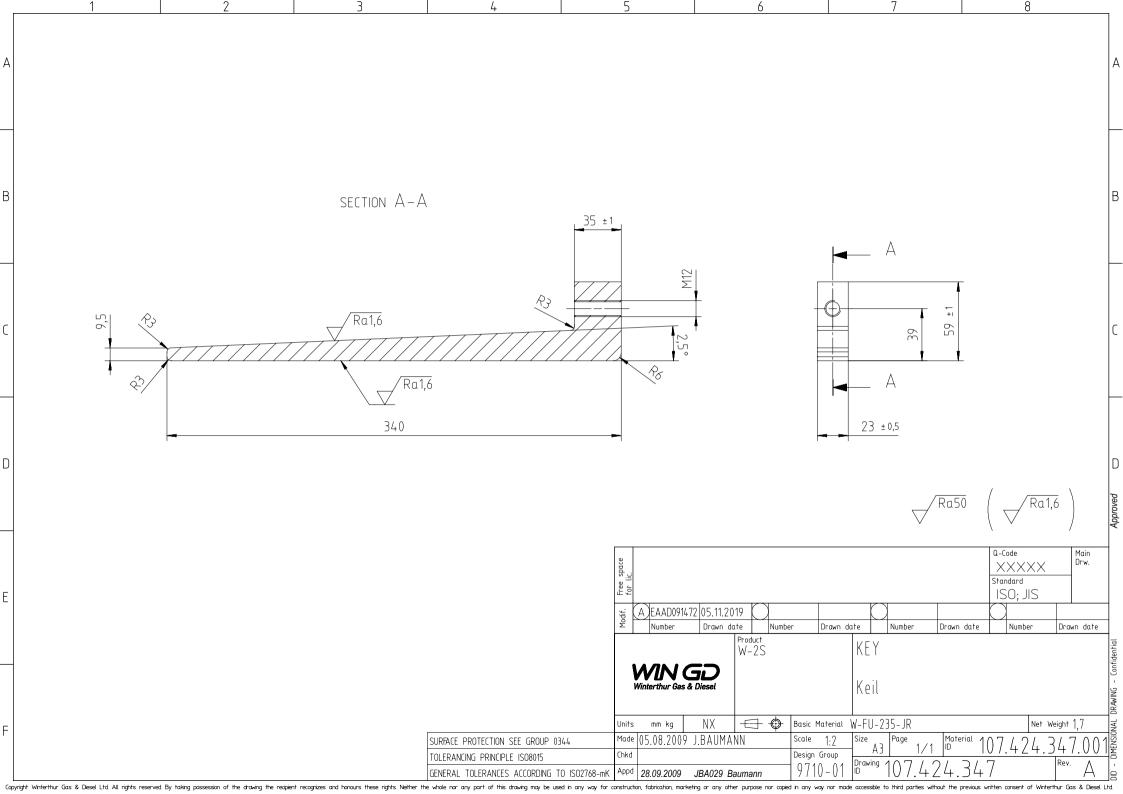

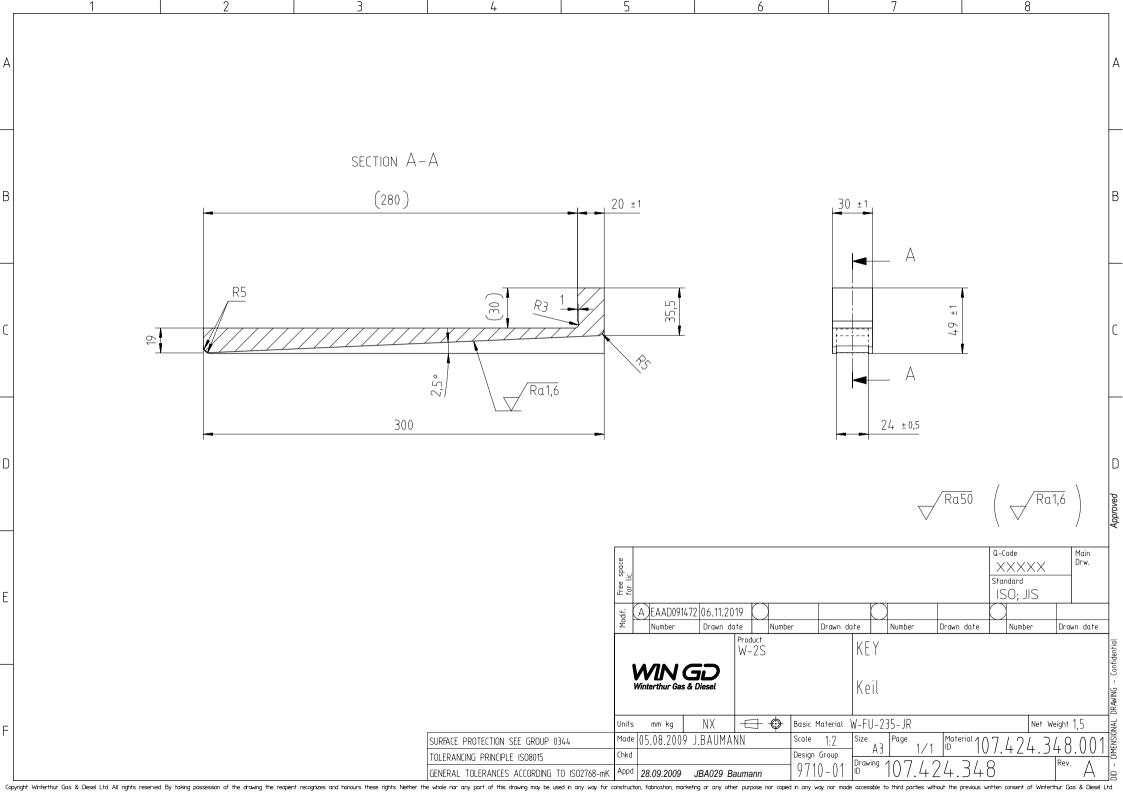

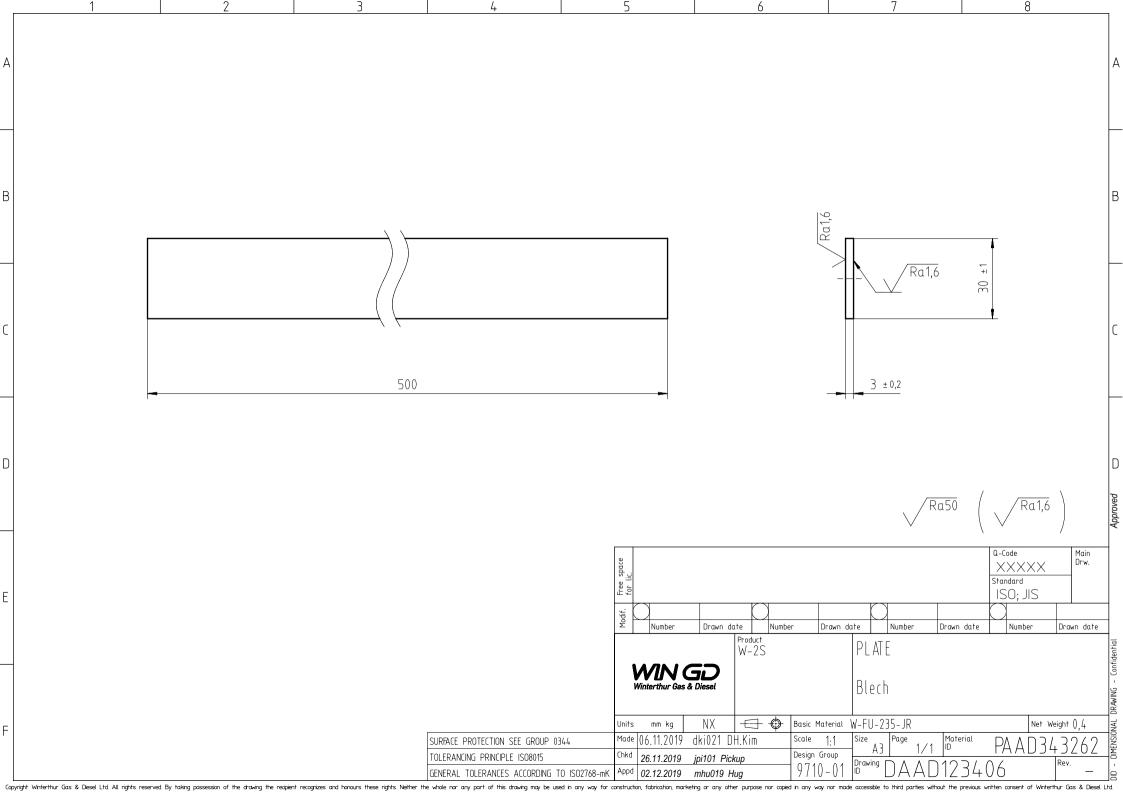



MIDS - TOOL-ENGINE-ALIGNMENT (DG9710-01)

WinGD X62DF-1.1/-2.1

TRACK CHANGES

DATE	SUBJECT	DESCRIPTION
2021-03-16	DRAWING SET	First web upload
2021-05-20	DAAD032454	Jacking Screw drg – new revision
2023-01-17	PAAD376986 PAAD377117	Main drgs – new revision
2023-10-19	PAAD325788- PAAD167768a PAAD325977- PAAD103372b PAAD326134- PAAD242995a PAAD326249- PAAD322052a	New drawings added

DISCLAIMER

THIS PUBLICATION IS DESIGNED TO PROVIDE AN ACCURATE AND AUTHORITATIVE INFORMATION WITH REGARD TO THE SUBJECT-MATTER COVERED AS WAS AVAILABLE AT THE TIME OF PRINTING. HOWEVER, THE PUBLICATION DEALS WITH COMPLICATED TECHNICAL MATTERS SUITED ONLY FOR SPECIALISTS IN THE AREA, AND THE DESIGN OF THE SUBJECT-PRODUCTS IS SUBJECT TO REGULAR IMPROVEMENTS, MODIFICATIONS AND CHANGES. CONSEQUENTLY, THE PUBLISHER AND COPYRIGHT OWNER OF THIS PUBLICATION CAN NOT ACCEPT ANY RESPONSIBILITY OR LIABILITY FOR ANY EVENTUAL ERRORS OR OMISSIONS IN THIS BOOKLET OR FOR DISCREPANCIES ARISING FROM THE FEATURES OF ANY ACTUAL ITEM IN THE RESPECTIVE PRODUCT BEING DIFFERENT FROM THOSE SHOWN IN THIS PUBLICATION. THE PUBLISHER AND COPYRIGHT OWNER SHALL UNDER NO CIRCUMSTANCES BE HELD LIABLE FOR ANY FINANCIAL CONSEQUENTIAL DAMAGES OR OTHER LOSS, OR ANY OTHER DAMAGE OR INJURY, SUFFERED BY ANY PARTY MAKING USE OF THIS PUBLICATION OR THE INFORMATION CONTAINED HEREIN.

[©] Copyright by Winterthur Gas & Diesel Ltd.

All rights reserved. No part of this document may be reproduced or copied in any form or by any means (electronic, mechanical, graphic, photocopying, recording, taping or other information retrieval systems) without the prior written permission of the copyright owner.