

### CAUTION


Tool and/or bedplate damage


Avoid overloading of bedplate areas by observing the appropriate engine alignment/assembly procedure as follows:

- Insert wedges and/or shims in all indicated positions.
- Lift the engine into the engine room and place it on levelled wedges and/or shims (wedges or shims must be inserted as deep as possible below the bedplate to ensure that the support point is as close as possible at the engine monoblock column)
- Apply hydraulic jacks to the protruding bedplate ribs nearby the relevant wedge and/or shim as indicated in the drawing.
- Start with the engine alignment by means of wedges and/or shims. Before adjusting the height of wedges and/or shims lift the engine by the hydraulic jacks. Any height adjustment must be performed in small steps no more than 1 mm per step. Changes in height larger than the maximum allowance (1mm) require a gradual process where all wedges and/or shims are successively adjusted in stages, to ensure the best possible load

#### Remarks

- \*1) To be provided by the shipyard
  \*2) Height depending on the requirement
  (chock thickness in correlation with maximum
  permissible extension of the hydraulic jack)
  \*3) Hydraulic jack proposal
  Type: Enerpac RCH-1003
  Load at 700 bar: 931 kN

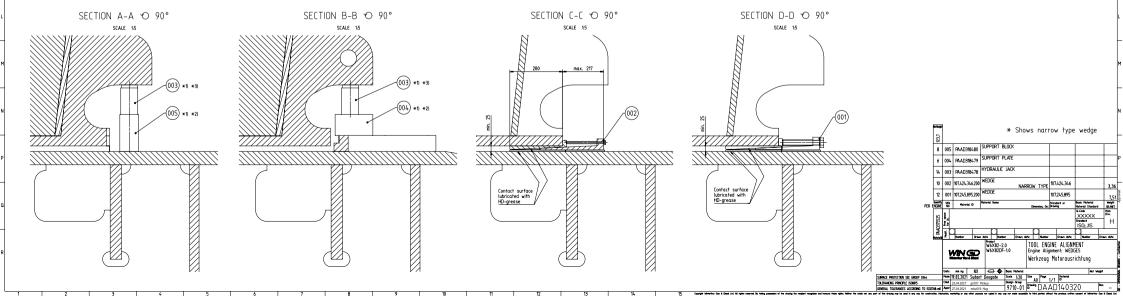

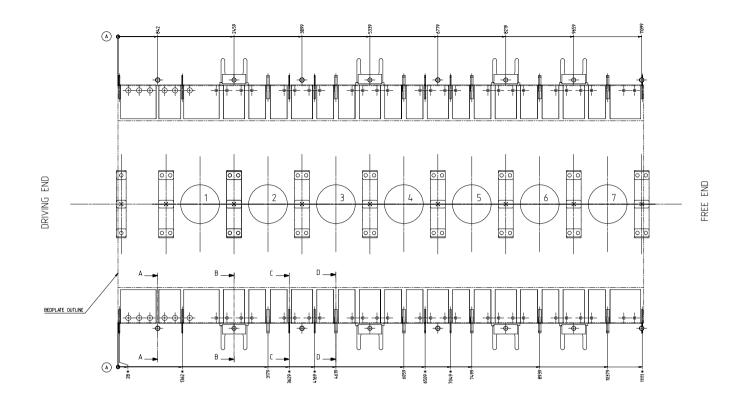

### CAUTION


Tool and/or bedplate damage


Avoid overloading of bedplate areas by observing the appropriate engine alignment/assembly procedure as follows:

- Insert wedges and/or shims in all indicated positions.
- Lift the engine into the engine room and place it on levelled wedges and/or shims (wedges or shims must be inserted as deep as possible below the bedplate to ensure that the support point is as close as possible at the engine monoblock column)
- Apply hydraulic jacks to the protruding bedplate ribs nearby the relevant wedge and/or shim as indicated in the drawing.
- Start with the engine alignment by means of wedges and/or shims. Before adjusting the height of wedges and/or shims lift the engine by the hydraulic jacks. Any height adjustment must be performed in small steps no more than 1 mm per step. Changes in height larger than the maximum allowance (limn) require a gradual process where all wedges and/or shims are successively adjusted in stages, to ensure the best possible load distribution.

### Remarks

- \*1) To be provided by the shipyard
  \*2) Height depending on the requirement
  (chock thickness in correlation with maximum
  permissible extension of the hydraulic jack)
  \*3) Hydraulic jack proposal
  Type: Enerpac RCH-1003
  Load at 700 bar: 931 kN

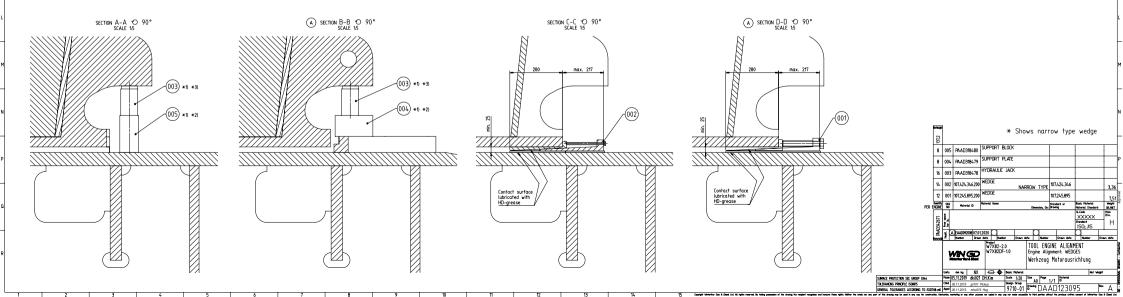

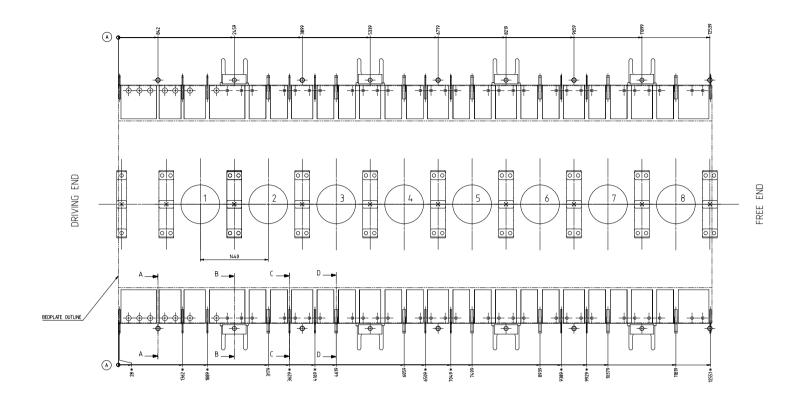

### CAUTION

Tool and/or bedplate damage


Countermeasure: Avoid overloading of bedplate areas by observing


the appropriate engine alignment/assembly procedure as follows:


- Insert wedges and/or shims in all indicated positions.
- Lift the engine into the engine room and place it on levelled wedges and/or shims (wedges or shims must be inserted as deep as possible below the bedplate to ensure that the support point is as close as possible at the engine monoblock column)
- Apply hydraulic jacks to the protruding bedplate ribs nearby the relevant wedge and/or shim as indicated in the drawing.
- Start with the engine alignment by means of wedges and/or shims. Before adjusting the height of wedges and/or shims lift the engine by the hydraulic jacks. Any height adjustment must be performed in small steps no more than 1 mm per step. Changes in height larger than the maximum allowance (Imm) require a gradual process where all wedges and/or shims are successively adjusted in stages, to ensure the best possible load


#### Remarks


- \*1) To be provided by the shipyard \*2) Height depending on the requirement (chock thickness in correlation with maximum
- permissible extension of the hydraulic jack) \*3) Hydraulic jack proposal Type: Enerpac RCH-1003 Load at 700 bar: 931 kN

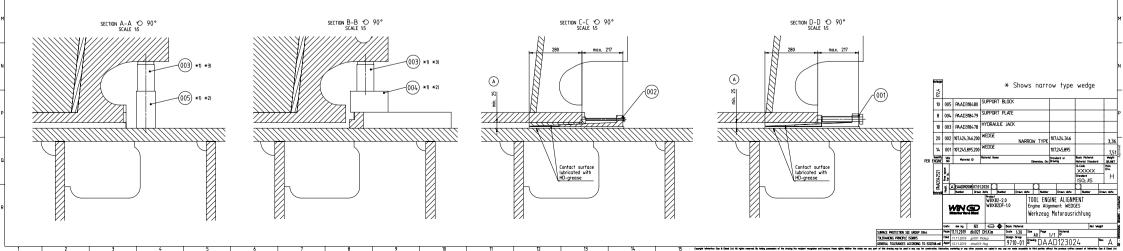


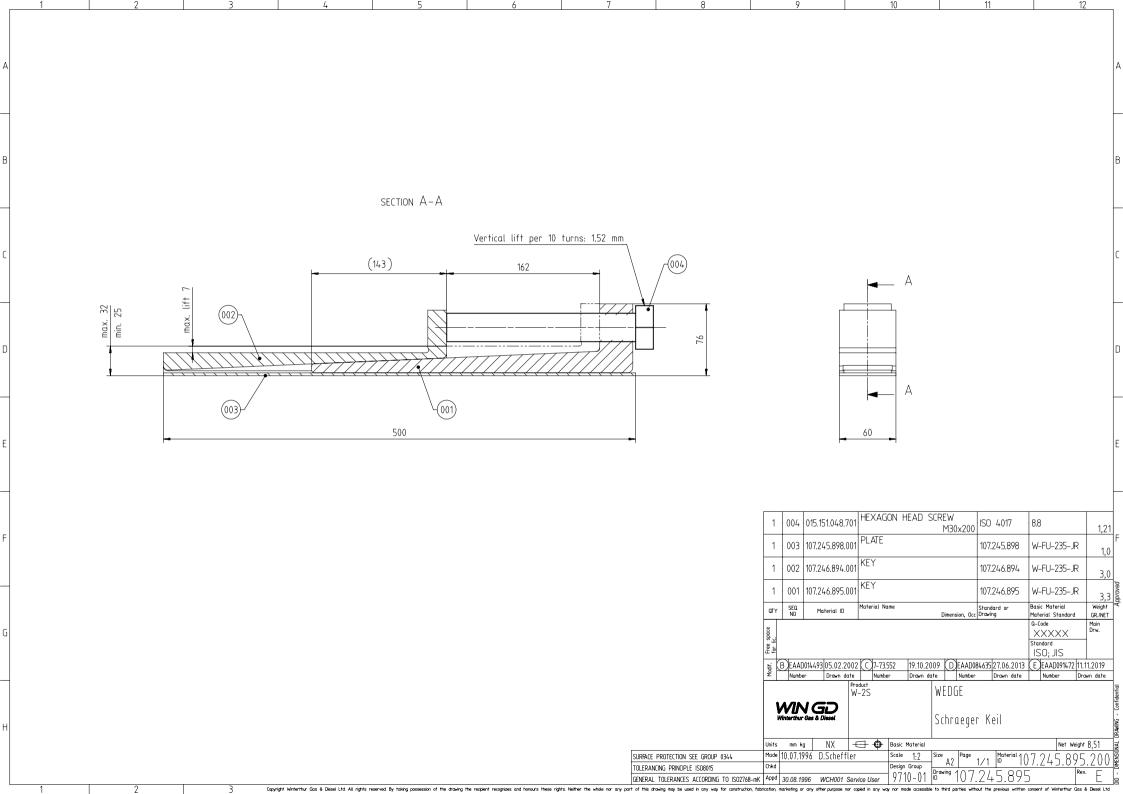


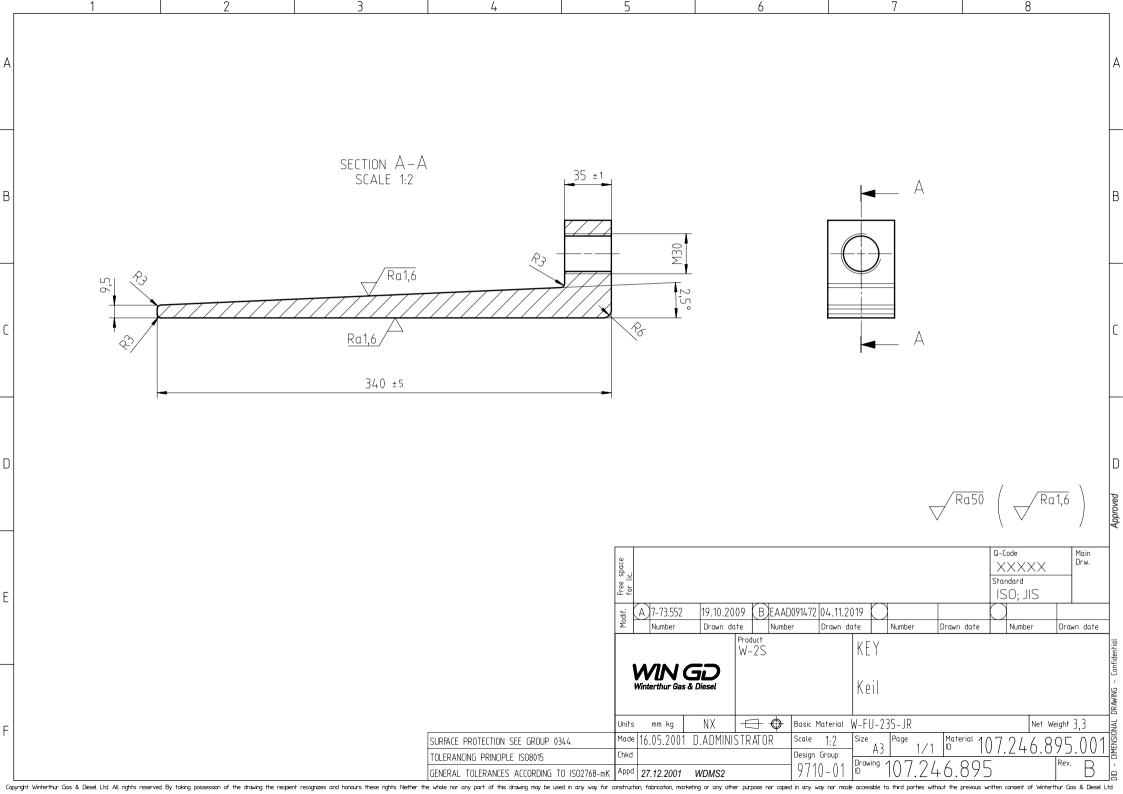


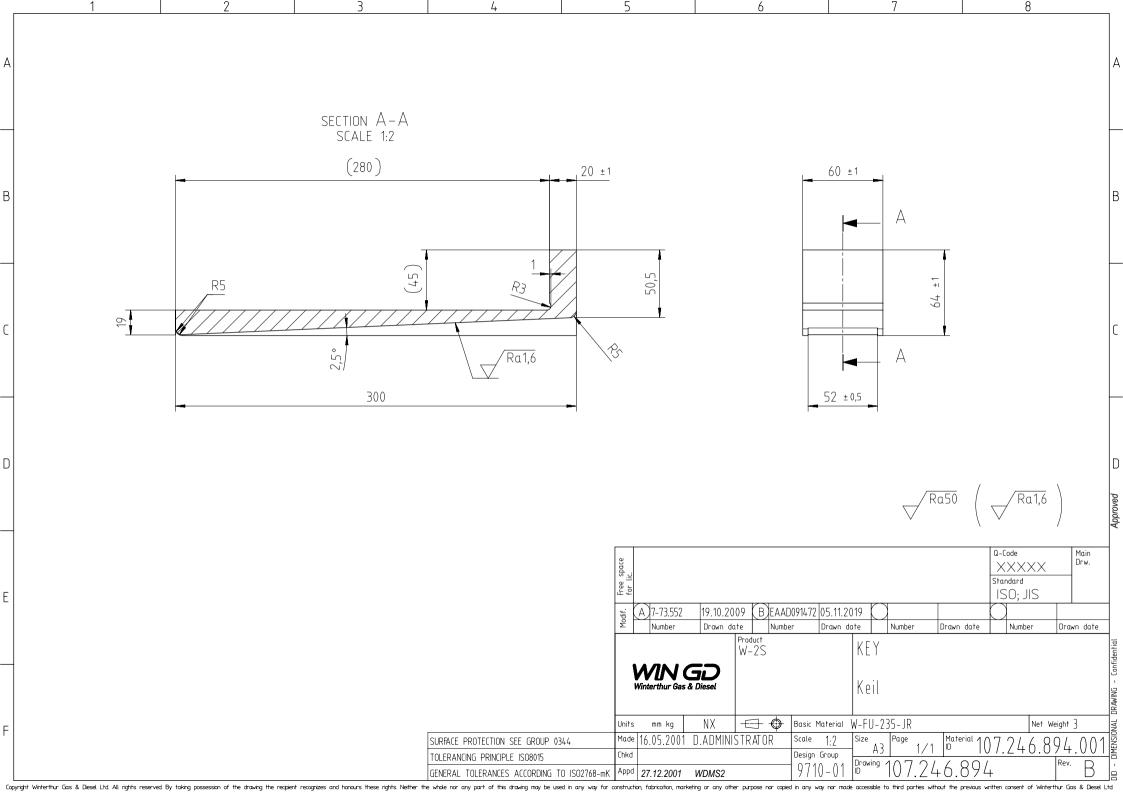


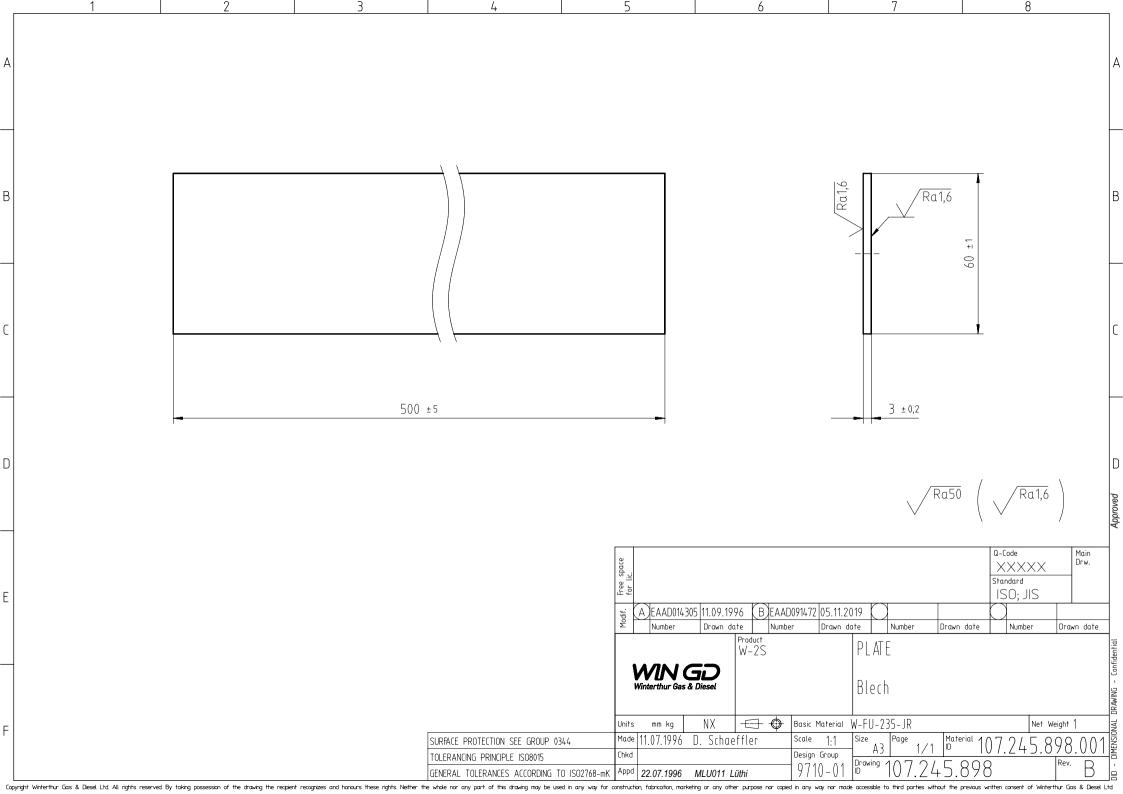

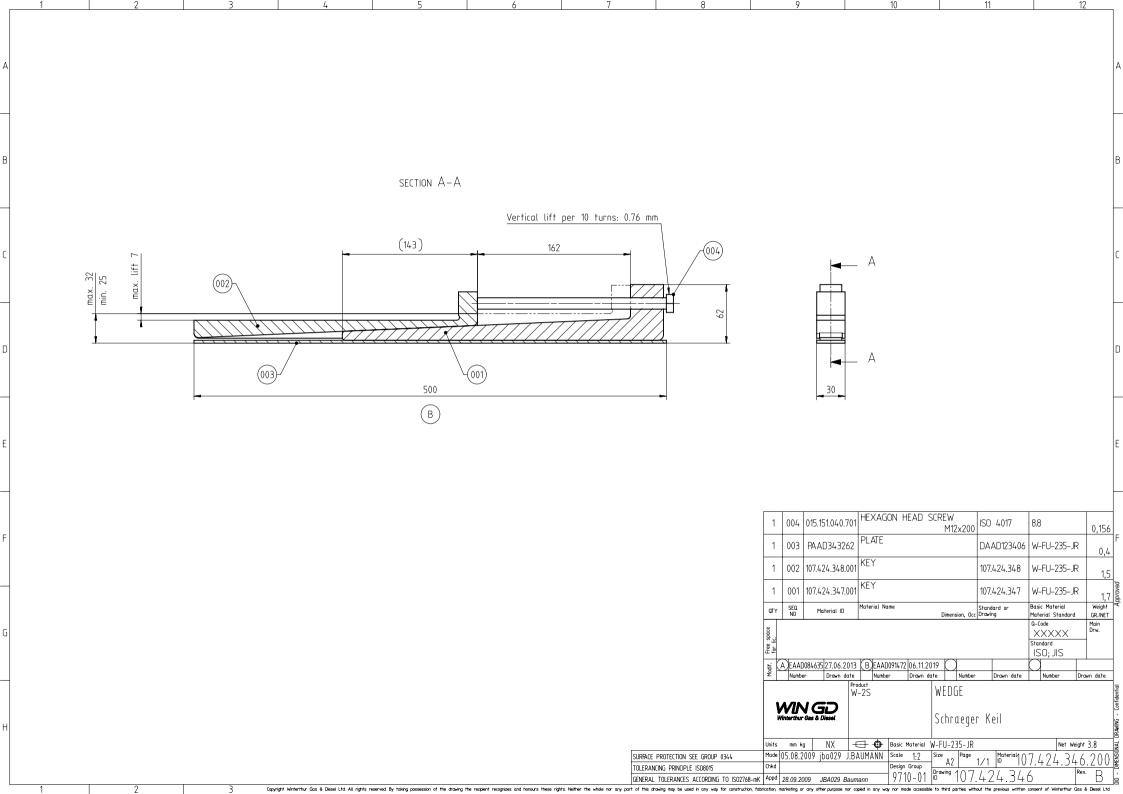

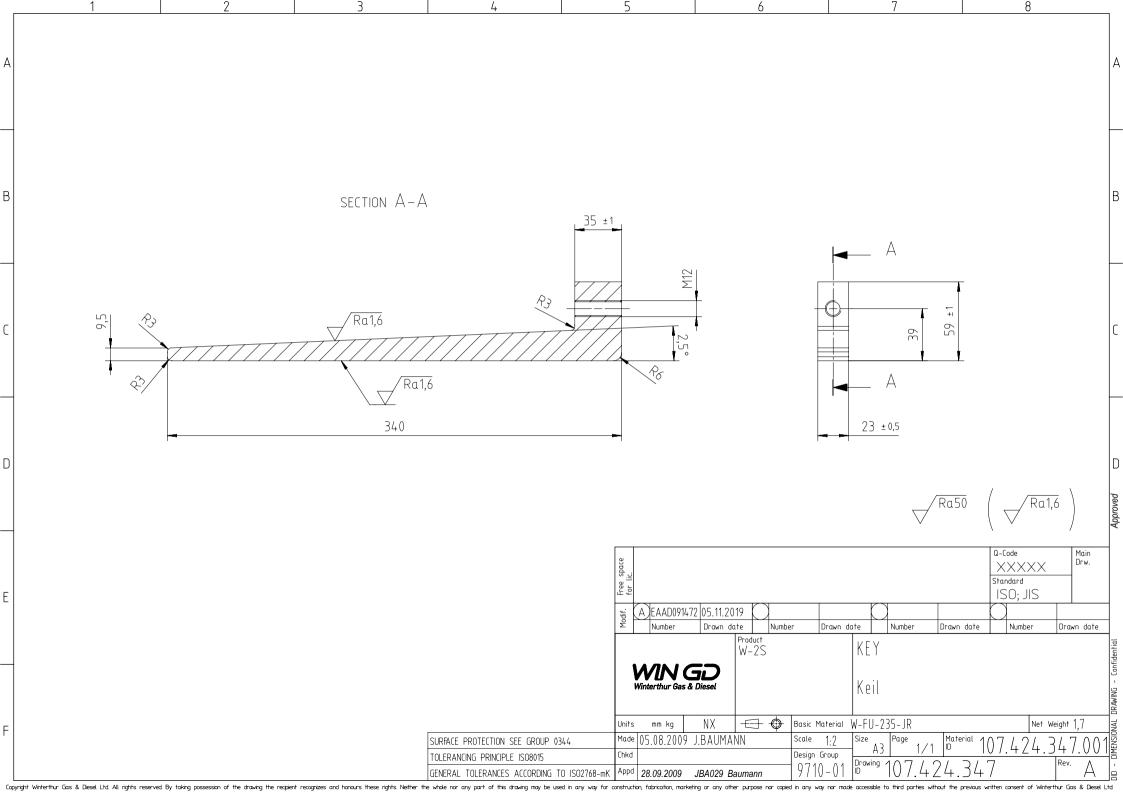

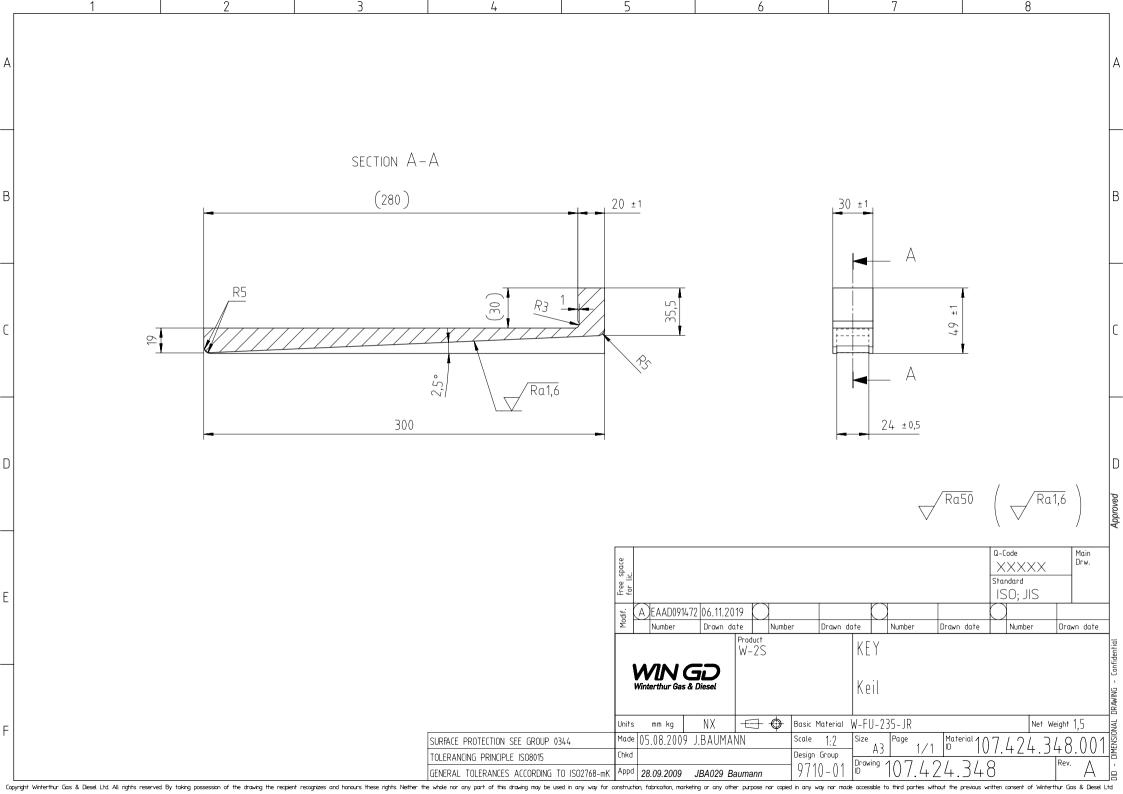

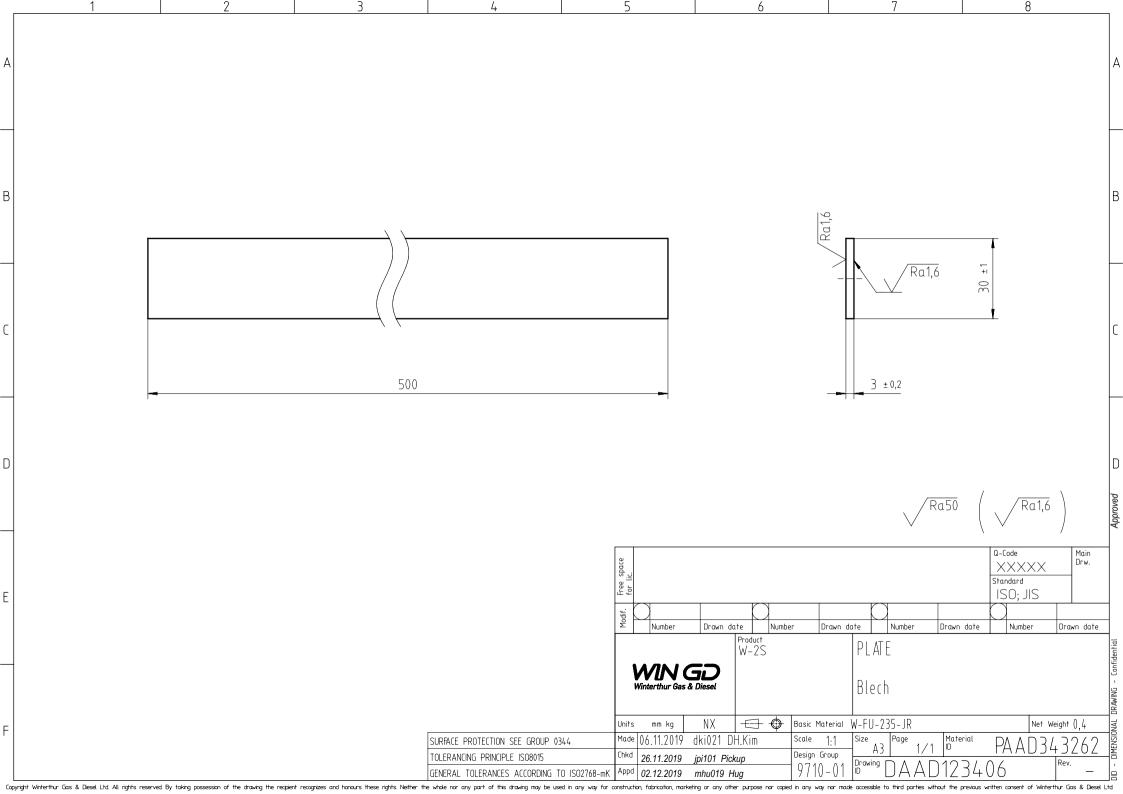



# MIDS - WinGD X82/-2.0/DF-1.0 - ENGINE TOOL ALIGNMENT (DG9710-01)

## TRACK CHANGES

DATE	SUBJECT	DESCRIPTION
2019-11-12	DRAWING SET	First web upload
2020-02-07	DAAD123024 DAAD123095	Main drgs – new revision
	107.245.895 107.246.895 107.246.894 107.245.898 107.424.346 107.424.347 107.424.348 DAAD123406	Wedge assembly parts drgs – new revsion
2021-05-18	DAAD140320	New drawing set for 6cyl. engine execution - added

# **DISCLAIMER**

© Copyright by Winterthur Gas & Diesel Ltd.

All rights reserved. No part of this document may be reproduced or copied in any form or by any means (electronic, mechanical, graphic, photocopying, recording, taping or other information retrieval systems) without the prior written permission of the copyright owner.

THIS PUBLICATION IS DESIGNED TO PROVIDE AN ACCURATE AND AUTHORITATIVE INFORMATION WITH REGARD TO THE SUBJECT-MATTER COVERED AS WAS AVAILABLE AT THE TIME OF PRINTING. HOWEVER, THE PUBLICATION DEALS WITH COMPLICATED TECHNICAL MATTERS SUITED ONLY FOR SPECIALISTS IN THE AREA, AND THE DESIGN OF THE SUBJECT-PRODUCTS IS SUBJECT TO REGULAR IMPROVEMENTS, MODIFICATIONS AND CHANGES. CONSEQUENTLY, THE PUBLISHER AND COPYRIGHT OWNER OF THIS PUBLICATION CAN NOT ACCEPT ANY RESPONSIBILITY OR LIABILITY FOR ANY EVENTUAL ERRORS OR OMISSIONS IN THIS BOOKLET OR FOR DISCREPANCIES ARISING FROM THE FEATURES OF ANY ACTUAL ITEM IN THE RESPECTIVE PRODUCT BEING DIFFERENT FROM THOSE SHOWN IN THIS PUBLICATION. THE PUBLISHER AND COPYRIGHT OWNER SHALL UNDER NO CIRCUMSTANCES BE HELD LIABLE FOR ANY FINANCIAL CONSEQUENTIAL DAMAGES OR OTHER LOSS, OR ANY OTHER DAMAGE OR INJURY, SUFFERED BY ANY PARTY MAKING USE OF THIS PUBLICATION OR THE INFORMATION CONTAINED HEREIN.