

Winterthur Gas & Diesel Ltd. Winterthur Gas & Diesel AG Winterthur Gas & Diesel S.A. Schützenstrasse 3 P.O. Box 414, 8401 Winterthur, Switzerland Tel. +41 (0)52 264 8844 Fax +41 (0)52 264 8866 www.wingd.com



#### © 2021 Winterthur Gas & Diesel Ltd. – All rights reserved

No part of this publication may be reproduced or copied in any form or by any means (electronic, mechanical, graphic, photocopying, recording, taping or other information retrieval systems) without the prior written permission of the copyright holder. Winterthur Gas & Diesel Ltd. makes no representation, warranty (express or implied) in this publication and assumes no responsibility for the correctness, errors or omissions of information contained herein. Information in this publication is subject to change without notice.

#### NO LIABILITY, WHETHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL, IS ASSUMED WITH RESPECT TO THE INFORMATION CONTAINED HEREIN. THIS PUBLICATION IS INTENDED FOR INFORMATION PURPOSES ONLY.

www.wingd.com

## **1 Usual values and safeguard settings**

1	List of usual values and safeguard settings - change record	4
2	List of usual values and safeguard settings - general	.6
3	List of usual values and safeguard settings	10

Usual values and safeguard settings

## 1 List of usual values and safeguard settings - change record

### Tab 1-1 Change record

Data module code, issue	Status
Chapter number - technical name	
Reason for change	
Revised issue 005, 2023-01	
WINGDX92DF-AA00-HA1-50-0000-00AAA-033B-A , issue 05	revised
3 - List of usual values and safeguard settings	
Tab. 1-5 - Changed value for TE1121-nnA (HT cylinder cooling water).	
Revised issue 004, 2021-09	
WINGDX92DF-AA00-HA1-50-0000-00AAA-033B-A , issue 04	revised
3 - List of usual values and safeguard settings	
Tab. Fuel System - Updated the description in fuel supply - system side.	
Revised issue 003, 2019-09	
WINGDX92DF-AA00-HA1-50-0000-00AAA-033B-A , issue 04	revised
3 - List of usual values and safeguard settings	
Tab 6 - Changed value for PT2021A (crosshead bearing oil)	
Tab 12 - Changed values for TE3731-nnA (exhaust gas)	
Tab 14 - Changed notes for ST5201-nnA (impeller shaft)	
Revised issue 002, 2019-04	
WINGDX92DF-AA00-HA1-50-0000-00AAA-003D-A , issue 01	new
1 - List of usual values and safeguard settings - change record	
New chapter 1	
WINGDX92DF-AA00-HA1-50-0000-00AAA-033B-A , issue 03	revised
3 - List of usual values and safeguard settings	
Tab 9 - Added data for PT3124A	
Tab 9 - Added range for cylinder oil temperature at engine inlet	



List of usual values and safeguard settings - change record

Page left intentionally blank

## 2 List of usual values and safeguard settings - general

For each system of the engine the tables in the chapter that follows give the values for usual operation and the trigger values for safeguard settings.

### 2.1 Tables - identification

The tables give the data that follow:

Description

This list gives the description of the object or of the system.

#### • Medium / physical value / location

This list gives the data that follow:

- Medium that is monitored
- Physical parameter and unit
- Location of the measurement
- Usual operation (value or range)

This list gives the setpoint or the approximate range for usual operation. During operation the current values can have small differences to the given values.

#### • Signal number

This list gives the signal number as follows (refer also to Para 1.2.2):

• First two letters (XX) - Function code

- Four digit number of the signal (for example 10NN)
  - First two numbers Function group
    - Second two numbers Running number
- -nn If more than one signal of the same type is applicable (for example TE2501-nnA is TE2501A, TE2502A, TE2503A)
- Last letter Applied system

#### • Function

This list gives one of the functions that follow:

- ALM Alarm
- GTrip Gas Trip (the ECS changes to diesel mode)
- SLD Slowdown
- o SHD Shutdown

#### Level

This list gives one of the levels that follow:

- D Deviation
- o H High
- o L Low

#### • Trigger value

This list gives the value at which the related safeguard function starts.

For the analysis elements (AE) of concentration:

o max - maximum concentration

For the level switches (LS) and flow switches (FS):

- $_{\odot}$  min minimum or no flow
- o max maximum flow

#### • Delay

This list gives the delay of the action (in seconds) after the trigger value occurs.

## WINGD X92DF


Usual values and safeguard settings

00207

## 2.3 Signal codes - identification

An example of a signal code is shown in Figure 1-1.

#### Fig 1-1 Signal codes

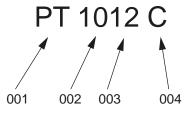

#### Legend

- 001 Function code
- 002 Function group

003	Running number
004	A market and a state and

004 Applied system

Code	First position	Second position
А	Analysis	n/a
С	Control	Control
E	n/a	Element
F	Flow	n/a
G	Gauge	n/a
н	Hand	n/a
I	n/a	Indication
J	Power	n/a
L	Level	n/a
Р	Pressure	n/a
S	Speed	Switch
т	Temperature	Transmitter
V	n/a	Valve
х	Unclassified	Unclassified
Y	Vibration	Relay
Z	Position (binary)	n/a

Code	Signal type	System
10 to 19	Signals from the engine	Cooling water
20 to 29	Signals from the engine	System oil, cooling oil
31	Signals from the engine	Cylinder lubrication
33	Signals from the engine	Fuel gas
34	Signals from the engine	Fuel oil
35	Signals from the engine	Fuel gas
37	Signals from the engine	Exhaust gas
40 to 49	Signals from the engine	Air systems
50 to 59	Signals from the engine	Miscellaneous
60 to 69	Signals from the engine	Spare
70 to 79	Signals to the engine	Miscellaneous
80 to 89	Signals to the engine	Miscellaneous

## Tab 1-3 Function group

### Tab 1-4 Applied system

Code	Description
А	Alarm and monitoring system
С	Control system
L	Local
М	Measured indication, Local control panel
S	Safety system
w	Wrong way alarm
х	Miscellaneous

## 3 List of usual values and safeguard settings

On the pages that follow you find the values for usual operation and the trigger values for safeguard settings as follows:

- Table 1-5 Cooling water systems (XX10NN to XX19NN)
- Table 1-6 Oil systems (XX2NNN, part 1)
- Table 1-7 Oil systems (XX2NNN, part 2)
- Table 1-8 Oil systems (XX2NNN, part 3 (turbocharger bearing oil))
- Table 1-9 Oil systems (XX2NNN, part 4)
- Table 1-10 Gas system (XX33NN and XX39NN)
- Table 1-11 Fuel system (XX34NN)
- Table 1-12 Exhaust gas system (XX37NN)
- Table 1-13 Air systems (XX40NN to XX44NN)
- Table 1-14 Miscellaneous items (XX45NN to XX52NN)

Usual values and safeguard settings

#### Tab 1-5 Cooling water systems (XX10NN to XX19NN)

Description	Usual oper-		Safegua	ard set	ting	
Medium / physical value / location	ation (value or range)	Signal number	Func- tion	Le- vel	Trigger value	De- lay
Cylinder liner, cylinder cover	-					
HT cylinder cooling water / pressure [bar] /	4.2 to 5	PT1101A	ALM	L	≤ 4.0	0
engine inlet connection 02			SLD	L	≤ 3.8	60
	-	PS1101S	SHD	L	≤ 3.5	60
HT cylinder cooling water / temperature [°C] / engine inlet connection 02	62 to 80	TE1111A	ALM	L	≤ 60	0
HT cylinder cooling water / temperature [°C] /	90 +/-2 1	TE1121-nnA	ALM	Н	≥ 95	0
outlet each cylinder (engine outlet connec- tion 03)	90 +/-4 <sup>2</sup>		SLD	Н	≥ 97	60
Scavenge air cooler (SAC)						
SAC LT cooling water / pressure [bar] / en- gine inlet connection 07	2.5 to 4	PT1361A	ALM	L	≤ 2.0	0
SAC LT cooling water / temperature [°C] / engine inlet connection 07	25 to 36 <sup>3</sup>	TE1371A	ALM	L	≤ 21	0
SAC LT cooling water / temperature [°C] / outlet each SAC	25 to 75	TE1381-nnA	ALM	Н	≥ 80	0

<sup>1</sup> This value is applicable for stable operation condition.

- 2 This value is applicable for transient operation condition.
- <sup>3</sup> WinGD recommends a setpoint value of 25°C. 36°C is only permitted if the seawater temperature is 32°C.

Usual values and safeguard settings

## Tab 1-6 Oil systems (XX2NNN, part 1)

Description	Usual oper-						
Medium / physical value / location	ation (value or range)	Signal number	Func- tion	Le- vel	Trigger value	De- lay	
Lubricating oil supply - system side				-			
Main lubricating oil / pressure [bar] / engine	4.2 to 5	PT2001A	ALM	L	≤ 4.0	0	
inlet connection 25			SLD	L	≤ 3.8	60	
	-	PS2002S	SHD	L	≤ 3.3	10	
Main lubricating oil / temperature [°C] / en-	45 +/-2 1	TE2011A	ALM	н	≥ 50	0	
gine inlet connection 25	45 +/-4 <sup>2</sup>		SLD	Н	≥ 55	60	
If applicable: external oil / pressure [bar] / in-	4.2 to 5	PT2012A	ALM	L	≤ 4.0	0	
let fuel pump			SLD	L	≤ 3.8	60	
	-	PS2012S	SHD	L	≤ 3.3	10	
If applicable: external oil (SAE 30) / temper-	45 +/-2 1	TE2012A	ALM	Н	≥ 50	0	
ature [°C] / inlet fuel pump	45 +/-4 <sup>2</sup>		SLD	Н	≥ 55	0	
If applicable: external oil (SAE 40) / temper-	50 +/-2 <sup>1</sup>		ALM	Н	≥ 55	0	
ature [°C] / inlet fuel pump	50 +/-4 <sup>2</sup>		SLD	Н	≥ 60	0	
If applicable: external crosshead bearing oil /	10.2 to 13	PT2021A	ALM	L	≤ 10.0 <sup>3</sup>	10	
pressure [bar] / engine inlet connection 30			SLD	L	≤ 9.0 <sup>3</sup>	60	
Bearing oil			-				
Main bearing oil / temperature [°C] / outlet	45 to 60	TE2101-nnA	ALM	Н	≥ 65	0	
each main bearing (optional)			SLD	н	≥ 70	60	
Crank bearing oil / temperature [°C] / outlet	45 to 60	TE2201-nnA	ALM	Н	≥ 65	0	
each crank bearing (optional)			SLD	Н	≥ 70	60	
Crosshead bearing oil / temperature [°C] /	45 to 60	TE2301-nnA	ALM	Н	≥ 65	0	
outlet each crosshead bearing (optional)			SLD	н	≥ 70	60	

1 This value is applicable for stable operation condition.

2 This value is applicable for transient operation condition.

3 The trigger value is only applicable above 40% engine load.

Usual values and safeguard settings

## Tab 1-7Oil systems (XX2NNN, part 2)

Description	Usual oper- ation (value or range)	Safeguard setting				
Medium / physical value / location		Signal number	Func- tion	Le- vel	Trigger value	De- lay
Servo oil						
Servo oil / flow / inlet each servo oil pump $^1$	-	FS2061-nnA	ALM	L	min	0
			ALM	Н	max	0
Servo oil leakage / flow / servo oil supply unit	-	LS2055A	ALM	Н	max	10
Oil mist						
Oil mist / concentration / crankcase (each	-	AE2401-nnA	ALM	Н	max	0
cylinder) <sup>2</sup>		AS2401-02A	ALM	Н	max	0
	-	AS2401S	SLD	Н	max	60
Oil mist / concentration / gearcase	-	AE2415A	ALM	Н	max	0
Oil mist / concentration / fuel supply unit	-	AE2421-22A	ALM	Н	max	0
Piston cooling oil		-				
Piston cooling oil / temperature [°C] / outlet	45 to 75	TE2501-nnA	ALM	Н	≥ 80	0
each cylinder			SLD	Н	≥ 85	60
Piston cooling oil / flow [l/min] / outlet each cylinder	-	FS2521-nnS	SHD	L	min	15

1 The trigger values are only applicable above 30% engine load.

2 The concentration is related to the lower explosive level (LEL).

Usual values and safeguard settings

## Tab 1-8 Oil systems (XX2NNN, part 3 (turbocharger bearing oil))

Description	Usual oper- ation (value or range)					
Medium / physical value / location		Signal number	Func- tion	Le- vel	Trigger value	De- lay
Bearing oil turbocharger Accelleron A100	/200-L with i	internal oil				
TC bearing oil / pressure [bar] / inlet each	1.5 to 5.0	PT2611-nnA	ALM	L	≤ 1.0	5
turbocharger			SLD	L	≤ 0.8	60
	-	PS2611-nnS	SHD	L	≤ 0.6	5
TC bearing oil / temperature [°C] / outlet each	45 to 100	TE2601-nnA	ALM	Н	≥ 110	0
turbocharger			SLD	Н	≥ 120	60
Bearing oil turbocharger Accelleron A100	/200-L with e	external oil				
TC bearing oil / pressure [bar] / inlet each	1.5 to 5.0	PT2611-nnA	ALM	L	≤ 1.3	5
turbocharger			SLD	L	≤ 1.1	60
	-	PS2611-nnS	SHD	L	≤ 0.9	5
TC bearing oil / temperature [°C] / inlet tur-	45 to 80	TE2621A	ALM	Н	≥ 85	0
bocharger			SLD	Н	≥ 90	60
TC bearing oil / temperature [°C] / outlet each	45 to 120	TE2601-nnA	ALM	Н	≥ 130	0
turbocharger			SLD	Н	≥ 140	60
Bearing oil turbocharger MHI MET with int	ernal oil					
TC bearing oil / pressure [bar] / inlet each	1.0 to 5.0	PT2611-nnA	ALM	L	≤ 0.7	5
turbocharger			SLD	L	≤ 0.6	60
	-	PS2611-nnS	SHD	L	≤ 0.4	5
TC bearing oil / temperature [°C] / outlet each	h 45 to 80	TE2601-nnA	ALM	Н	≥ 85	0
turbocharger			SLD	Н	≥ 90	60
Bearing oil turbocharger MHI MET with ex	ternal oil					
TC bearing oil / pressure [bar] / inlet each	1.0 to 5.0	PT2611-nnA	ALM	L	≤ 0.7	5
turbocharger			SLD	L	≤ 0.6	60
	-	PS2611-nnS	SHD	L	≤ 0.4	5
TC bearing oil / temperature [°C] / inlet tur-	45 to 50	TE2621A	ALM	Н	≥ 60	0
bocharger			SLD	Н	≥ 65	60
TC bearing oil / temperature [°C] / outlet each	45 to 80	TE2601-nnA	ALM	Н	≥ 85	0
turbocharger			SLD	н	≥ 90	60

Usual values and safeguard settings

## Tab 1-9 Oil systems (XX2NNN, part 4)

Description	Usual oper- Safeguard setting				ting	
Medium / physical value / location	ation (value or range)	Signal number	Func- tion	Le- vel	Trigger value	De- lay
Damper oil						
Damper oil / pressure [bar] / inlet torsional vi- bration damper 1	2.8 to 5.0	PT2711A	ALM	L	≤ 2.2	0
Damper oil / pressure [bar] / axial vibration damper space aft side	1.8 to 5.0	PT2721A	ALM	L	≤ 1.7	60
Damper oil / pressure [bar] / axial vibration damper space fore side	1.8 to 5.0	PT2722A	ALM	L	≤ 1.7	60
Cylinder oil						
Cylinder oil / pressure [bar] / cylinder oil rail	≥ 0.4	PT3124A	ALM	L	≤ 0.1	30
Cylinder oil / temperature [°C] / engine inlet	35 to 50	-	-	-	-	-

1 The setpoint and trigger values can be different. For the applicable values, refer to the specification of the damper manufacturer.

2 This value is only applicable if the engine has no iCAT.

Usual values and safeguard settings

#### Tab 1-10Gas system (XX33NN and XX39NN)

Description	Usual oper-		Safeguard setting				
Medium / physical value / location	ation (value or range)	Signal number	Func- tion	Le- vel	Trigger value	De- lay	
Gas leakage detection							
Gas leakage / concentration [% LEL] / piston	-	AE3315C	ALM	Н	≥ 20	0	
underside (engine inlet connection 82) <sup>1</sup>			GTrip	Н	≥ 40	0	
Gas supply - iGPR			-				
Gas / pressure [bar] / inlet iGPR (engine inlet	10 to 15 <sup>2</sup>	PT3941C	ALM	Н	≥ 16.0	0	
connection 78)			GTrip	Н	≥ 17.0	0	
Gas / flow [kg/h] / inlet iGPR (engine inlet connection 78)	1000 to 1800 <sup>3</sup>	FT3942C	-	-	-	-	
Gas / pressure [bar] / outlet flowmeter	10 to 15	PT3901C	-	-	-	-	
		PS3901S	GTrip	Н	≥ 18.0	0	
		PS3902S	GTrip	L	≤ 2.0	0	
Gas / temperature [°C] / outlet flowmeter	20 to 50 <sup>4</sup>	TT3901C	-	-	-	-	
		TS3901S	GTrip	Н	≥ 60	3	
		TS3902S	GTrip	L	≤ 0 <sup>4</sup>	3	
Gas/underpressure[mbar]/iGPR enclosure	10 to 20	PT3903C	-	-	-	-	
Inert gas / pressure [bar] / engine inlet con- nection 83	5 to 15	PT3905C	-	-	-	-	
Gas / pressure [bar] / inlet pressure regula- tion valve	10 to 15	PT3906C	-	-	-	-	
Gas supply - gas rail			<u>.                                    </u>				
Gas / pressure [bar] / gas rail	2 to 14 <sup>3</sup>	PT3595C PT3597C	-	-	-	-	
Air / flow [l/min] / inlet double wall pipe	41 to 45	FS3904S	GTrip	L	≤ 40	0	

1 LEL - Lower explosive level

- 2 Related to the GTD requirement for the selected rating and to the LHV of the gas quality
- 3 Related to the engine load
- For a mixture of volatile organic compounds (VOC) and liquefied natural gas (LNG) the usual operation range is 45 to 55°C. The related trigger value is  $\leq 40$ °C.

Usual values and safeguard settings

## Tab 1-11Fuel system (XX34NN)

Description	Usual oper-	Safeguard setting						
Medium / physical value / location	ation (value or range)	Signal number	Func- tion	Le- vel	Trigger value	De- lay		
Fuel supply - system side								
High viscosity fuel which requires heating (HFO, excluding RMA10) / viscosity [cSt] / engine inlet connection 49	13 to 17	_ 1	ALM	Н	≥ 20	0		
			ALM	L	≤ 10	0		
Low viscosity fuel which requires no heating	3 to 14	_ 1	ALM	Н	≥ 17	0		
(distillates, RMA10, most ULSFO) / viscosity [cSt] / engine inlet connection 49			ALM	L	≤ 2	0		
Fuel supply unit	Fuel supply unit							
Fuel / pressure [bar] / inlet fuel supply unit	7.5 to 10 <sup>2</sup>	PT3421A	ALM	L	≤7	0		
Fuel / temperature [°C] / inlet fuel supply unit $^3$	20 to 150 T	TE3411A	ALM	Н	≥ 50 to 160	0		
			ALM	L	≤ 20 to 130	0		
Fuel leakage / flow / outlet fuel supply unit	-	LS3426A	ALM	Н	max	10		
Fuel leakage / flow / outlet fuel rail items	-	LS3446-47A	ALM	Н	max	10		
Rail unit								
Leakage / flow / outlet rail unit	-	LS3444-45A	ALM	Η	max	10		
Pilot fuel filter								
Fuel / differential pressure [bar] / pilot fuel fil- ter	-	PS3464A	ALM	Н	≥ 2.5	0		

1 This measurement is not included in the standard engine supply (the viscometer is a yard supply item).

<sup>2</sup> When the engine has stopped, the setpoint is 10 bar. The value decreases when the engine load increases.

3 The values are related to the fuel viscosity.



## Tab 1-12 Exhaust gas system (XX37NN)

Description	Usual oper-							
Medium / physical value / location	ation (value or range)	Signal number	Func- tion	Le- vel	Trigger value	De- lay		
Exhaust pipe / manifold	Exhaust pipe / manifold							
Exhaust gas / temperature [°C] / outlet each cylinder	-	TE3701-nnA	ALM	Н	≥ 515	0		
			ALM	D	≥ 50	0		
			SLD	Н	≥ 530	60		
			SLD	D	≥ 70	60		
Exhaust gas / temperature [°C] / inlet each turbocharger	-	TE3721-nnA	ALM	Н	≥ 515	0		
			SLD	Н	≥ 530	60		
Exhaust gas / temperature [°C] / outlet each turbocharger	-	TE3731-nnA	ALM	Н	≥ 340	0		
			SLD	Н	≥ 380	60		

Usual values and safeguard settings

## Tab 1-13 Air systems (XX40NN to XX44NN)

Description	Usual oper-		Safeguard setting				
Medium / physical value / location	ation (value or range)	Signal number	Func- tion	Le- vel	Trigger value	De- lay	
Scavenge air receiver							
Scavenge air / temperature [°C] / outlet each air cooler	28 to 55	TE4031-nnA	ALM	L	≤ 25	0	
			ALM	Н	≥ 60	0	
			SLD	Н	≥ 70	60	
Scavenge air / temperature [°C] / piston un-	28 to 55	TE4081-nnA	ALM	Н	≥ 80	0	
derside each cylinder			SLD	Н	≥ 120	60	
Condensation water / flow / at each water	-	LS4071-nnA	ALM	Н	max	10	
separator			SLD	н	max	60	
Condensation water / flow / upstream each	-	LS4075-nnA	ALM	Н	max	10	
water separator			SLD	Н	max	60	
Starting air supply							
Starting air supply / pressure [bar] / engine inlet connection 40	20 to 30	-	-	-	-	-	
Control air supply unit						-	
Control air supply / pressure [bar] / engine inlet connection 45	7 to 9	-	-	-	-	-	
Control air / pressure [bar] / outlet usual sup- ply	6.5	PT4401A	ALM	L	≤ 6.0	0	
Control air / pressure [bar] / outlet stand-by supply	6.0	PT4411A	ALM	L	≤ 5.5	0	
Control air / pressure [bar] / air tank for safety supply	6.5 or 6.0	PT4421A	ALM	L	≤ 5.0	15	
Air spring							
Air spring air / pressure [bar] / supply to air spring	6.5 or 6.0	PT4341A	ALM	Н	≥ 7.5	0	
			ALM	L	≤ 5.5	0	
			SLD	L	≤ 5.0	60	
	-	PS4341S	SHD	L	≤ 4.5	0	
Oil leakage / flow / air spring at driving end	-	LS4351A	ALM	Н	max	5	
Oil leakage / flow / air spring at free end	-	LS4352A	ALM	Н	max	5	



#### Tab 1-14 Miscellaneous items (XX45NN to XX52NN)

Description	Usual oper-	<b>3</b>						
Medium / physical value / location	ation (value or range)	Signal number	Func- tion	Le- vel	Trigger value	De- lay		
Thrust bearing								
Pad / temperature [°C] / thrust bearing (AHEAD)	45 to 75	TE4521A	ALM	Н	≥ 80	0		
			SLD	Н	≥ 85	60		
	-	TS4521S	SHD	Н	≥ 90	60		
Cylinder liner								
Wall / temperature [°C] / each cylinder liner	≤ 240 TE4801-nnC	ALM	Н	≥ 260	0			
aft side			SLD	Н	≥ 290	60		
Wall / temperature [°C] / each cylinder liner fore side	≤ 240	TE4841-nnC	ALM	Н	≥ 260	0		
			SLD	Н	≥ 290	60		
Powertrain	-							
Crankshaft / speed [% of CMCR] / crankshaft	-	ST5111-12S	SHD	Н	≥ 110	0		
Tachometer turbocharger (if signal is available as alarm)								
Impeller shaft / overspeed [rpm] / each Accelleron turbocharger (TC)	-	ST5201-nnA	ALM	Н	refer to note <sup>1</sup>	0		
Impeller shaft / overspeed [rpm] / each MHI turbocharger (TC)	-	ST5201-nnA	ALM	Н	refer to note <sup>2</sup>	0		

1 For Accelleron TC the alarm value is 0.97 x nMax on rating plate (nMax usually referred to as nMmax in 1/s).

2 For MHI TC the alarm value is 0.95 x nMax on rating plate (nMax usually referred to as overspeed in rpm).



Page left intentionally blank